

TFT-LCD TELEVISION LTN1785W

**SAMSUNG**

**LTN1785W**

**TFT-LCD TELEVISION**



**SERVICE DIVISION**  
**Samsung Electronics America Inc.**  
400 Valley Road, Suite 201, Mount. Arlington, NJ 07856  
TEL: 1-800-SAMSUNG (1-800-726-7864)  
[www.samsungusa.com](http://www.samsungusa.com)


**Owner's  
Instructions**

BN68-00437A-01

# Thank You for Choosing Samsung

Thank you for choosing Samsung! Your new Samsung TV represents the latest in television technology. We designed it with easy-to-use on-screen menus and closed captioning capabilities, making it one of the best products in its class. We are proud to offer you a product that will provide convenient, dependable service and enjoyment for years to come.

## Important Safety Information

 
 Always be careful when using your TV receiver. To reduce the risk of fire, electrical shock, and other injuries, keep these safety precautions in mind when installing, using, and maintaining your machine.

- Read all safety and operating instructions before operating your TV.
- Keep the safety and operating instructions for future reference.
- Heed all warnings on the TV receiver and in the operating instructions.
- Follow all operating and use instructions.
- Unplug the TV receiver from the wall outlet before cleaning. Use a damp cloth; do not use liquid or aerosol cleaners.
- Never add any attachments and/or equipment without approval of the manufacturer. Such additions can increase the risk of fire, electric shock, or other personal injury.
- Do not use the TV receiver where contact with or immersion in water is a possibility, such as near bath tubs, sinks, washing machines, swimming pools, etc.
- Do not place the TV on an unstable cart, stand, tripod, bracket, or table where it can fall. A falling TV can cause serious injury to a child or adult, and serious damage to the appliance. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer or sold with the TV. Follow the manufacturer's instructions when mounting the unit, and use a mounting accessory recommended by the manufacturer. Move the TV and cart with care. Quick stops, excessive force, and uneven surfaces can make the unit and cart unsteady and likely to overturn.
- Provide ventilation for the TV receiver. The unit is designed with slots in the cabinet for ventilation to protect it from overheating. Do not block these openings with any object, and do not place the TV receiver on a bed, sofa, rug, or other similar surface. Do not place it near a radiator or heat register. If you place the TV receiver on a rack or bookcase, ensure that there is adequate ventilation and that you've followed the manufacturer's instructions for mounting.
- Operate your TV receiver only from the type of power source indicated on the marking label. If you are not sure of the type of power supplied to your home, consult your appliance dealer or local power company.
- Use only a grounded or polarized outlet. For your safety, this TV is equipped with a polarized alternating current line plug having one blade wider than the other. This plug will fit into the power outlet only one way. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug still does not fit, contact your electrician to replace your outlet.



- Protect the power cord. Power supply cords should be routed so that they won't be walked on or pinched by objects placed on or against them. Pay particular attention to cords at plugs, convenience receptacles, and the point where they exit from the unit.
- Unplug the TV from the wall outlet and disconnect the antenna or cable system during a lightning storm or when left unattended and unused for long periods of time. This will prevent damage to the unit due to lightning and power-line surges.
- Avoid overhead power lines. An outside antenna system should not be placed in the vicinity of overhead power lines or other electric light or power circuits or where it can fall into such power lines or circuits. When installing an outside antenna system, be extremely careful to keep from touching the power lines or circuits. Contact with such lines can be fatal.
- Do not overload the wall outlet or extension cords. Overloading can result in fire or electric shock.
- Do not insert anything through the openings in the unit, where they can touch dangerous voltage points or damage parts. Never spill liquid of any kind on the TV.

- Ground outdoor antennas. If an outside antenna or cable system is connected to the TV, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges. Section 810 of the National Electrical Code, ANSI/NFPA No.70-1984, provides information about proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.

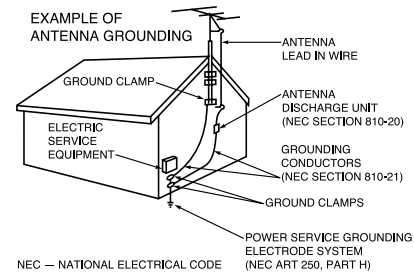

- Do not attempt to service the TV yourself. Refer all servicing to qualified service personnel. Unplug the unit from the wall outlet and refer servicing to qualified service personnel under the following conditions:
  - when the power-supply cord or plug is damaged
  - if liquid has been spilled on the unit or if objects have fallen into the unit
  - if the TV has been exposed to rain or water
  - if the TV does not operate normally by following the operating instructions
  - if the TV has been dropped or the cabinet has been damaged
  - when the TV exhibits a distinct change in performance
- If you make adjustments yourself, adjust only those controls that are covered by the operating instructions. Adjusting other controls may result in damage and will often require extensive work by a qualified technician to restore the TV to normal.
- When replacement parts are required, be sure the service technician uses replacement parts specified by the manufacturer or those that have the same characteristics as the original part. Unauthorized substitutions may result in additional damage to the unit.
- Upon completion of any service or repairs to this TV, ask the service technician to perform safety checks to determine that the TV is in a safe operating condition.

- Keep all power adapters apart.  
→ Possible fire hazard.
- Keep power adapter away from any other heat source.  
→ Possible fire hazard.
- Remove and discard vinyl bag from power adapter before use.  
→ Possible fire hazard.
- Always keep power adapters in well-ventilated area.



**CAUTION****RISK OF ELECTRIC SHOCK DO NOT OPEN**

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

This symbol indicates high voltage is present inside. It is dangerous to make any kind of contact with any inside part of this product.



This symbol alerts you that important literature concerning operation and maintenance has been included with this product.



*Note to CATV system installer:* This reminder is provided to call CATV system installer's attention to Article 820-40 of the National Electrical Code (Section 54 of Canadian Electrical Code, Part I), that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building as close to the point of cable entry as practical.

*Caution: FCC/CSA regulations state that any unauthorized changes or modifications to this equipment may void the user's authority to operate it.*

*Caution: To prevent electric shock, match the wide blade of plug to the wide slot, and fully insert the plug.*

*Attention: pour éviter les chocs électriques, introduire la lame la plus large de la fiche dans la borne correspondante de la prise et pousser jusqu'au fond.*

*Important:* One Federal Court has held that unauthorized recording of copyrighted TV programs is an infringement of U.S. copyright laws. Certain Canadian programs may also be copyrighted and any unauthorized recording in whole or in part may be in violation of these rights.

**To prevent damage which may result in fire or electric shock hazard, do not expose this appliance to rain or moisture.**

As an ENERGY STAR Partner.

Samsung Electronics America, Inc. has determined that this product or product model meets the ENERGY STAR guidelines for energy efficiency.

# FCC Information

## User Instructions

The Federal Communications Commission Radio Frequency Interference Statement includes the following warning:

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television receptions, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## User Information

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. If necessary, consult your dealer or an experienced radio/television technician for additional suggestions. You may find the booklet called How to Identify and Resolve Radio/TV Interference Problems helpful. This booklet was prepared by the Federal Communications Commission. It is available from the U.S. Government Printing Office, Washington, DC 20402, Stock Number 004-000-00345-4.

The party responsible for product compliance:  
SAMSUNG ELECTRONICS CO., LTD  
America QA Lab of Samsung  
3351 Michelson Drive,  
Suite #290, Irvine, CA92612 USA

## Warning

User must use shielded signal interface cables to maintain FCC compliance for the product. Provided with this monitor is a detachable power supply cord with IEC320 style terminations. It may be suitable for connection to any UL Listed personal computer with similar configuration. Before making the connection, make sure the voltage rating of the computer convenience outlet is the same as the monitor and that the ampere rating of the computer convenience outlet is equal to or exceeds the monitor voltage rating. For 120 Volt applications, use only UL Listed detachable power cord with NEMA configuration 5-15P type (parallel blades) plug cap. For 240 Volt applications use only UL Listed Detachable power supply cord with NEMA configuration 6015P type (tandem blades) plug cap.

## IC Compliance Notice

This Class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations of ICES-003. Cet appareil Numérique de classe B respecte toutes les exigences du Règlement NMB-03 sur les équipements produisant des interférences au Canada.

## Notice de Conformité IC

Cet appareil numérique de classe B respecte toutes les exigences du Règlement ICES-003 sur les équipements produisant des interférences au Canada.

## VCCI

This is a Class B product based on the standard of the Voluntary Control Council for Interference by Information Technology Equipment (VCCI). If this is used near a radio or television receiver in a domestic environment, it may cause radio interference. Install and use the equipment according to the instruction manual.

This Class B digital apparatus complies with Canadian ICES-003. Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:  
(1) This device may not cause harmful interference, and  
(2) This device must accept any interference received, including interference that may cause undesired operation.  
This television receiver provides display of television closed captioning in accordance with §15.119 of the FCC rules.

## Important Warranty Information Regarding Television Format Viewing

Standard screen format televisions (4:3, the aspect ratio of the screen width to height) are primarily designed to view standard format full-motion video. The images displayed on them should primarily be in the standard 4:3 ratio format and constantly moving.

Displaying stationary graphics and images on screen, such as the dark top and bottom letterbox bars (wide screen pictures), should be limited to no more than 15% of the total television viewing per week.

Wide screen format televisions (16:9, the aspect ratio of the screen width to height) are primarily designed to view wide screen format full-motion video. The images displayed on them should primarily be in the wide screen 16:9 ratio format, or expanded to fill the screen if your model offers this feature, and constantly moving. Displaying stationary graphics and images on screen, such as the dark side-bars on non-expanded standard format television video and programming, should be limited to no more than 15% of the total television viewing per week.

Additionally, viewing other stationary images and text such as stock market reports, video game displays, station logos, web sites or computer graphics and patterns, should be limited as described above for all televisions. Displaying any stationary images that exceed the above guidelines can cause uneven aging of picture tubes (LCDs) that leave subtle, but permanent burned-in ghost images in the television picture. To avoid this, vary the programming and images, and primarily display full screen moving images, not stationary patterns or dark bars. On television models that offer picture sizing features, use these controls to view the different formats as a full screen picture.

Be careful in the selection and duration of television formats used for viewing. Uneven LCD aging as a result of format selection and use, as well as other burned-in images, is not covered by your Samsung limited warranty.

### [Note]

If a still image is displayed for an extended period of time, residual images or blurring may appear.

When you need to leave the monitor unused for an extended period of time, adjust the settings so that the monitor automatically goes into energy saving mode or activates the screen saver to display moving images.

# CONTENTS

## Chapter 1: Your New TV

List of Features .....	1
List of Parts .....	1
Familiarizing Yourself with Your New TV .....	2
Top Panel Buttons .....	2
Rear Panel Jacks .....	3
Remote Control .....	4
Installing Batteries in the Remote Control .....	6
The remote control doesn't work .....	6

## Chapter 2: Installation

Connecting VHF and UHF Antennas .....	7
Antennas with 300-ohm Flat Twin Leads .....	7
Antennas with 75-ohm Round Leads .....	8
Separate VHF and UHF Antennas .....	8
Connecting Cable TV .....	8
Cable without a Cable Box .....	8
Connecting to a Cable Box that Descrambles All Channels ..	9
Connecting to a Cable Box that Descrambles Some Channels ..	9
Connecting a VCR .....	11
Connecting an S-VHS VCR .....	12
Connecting a DVD Player .....	13
Connecting a PC .....	14

## Chapter 3: Special Features

Turning the TV On and Off .....	15
Changing Channels .....	15
Using the Channel Buttons .....	15
Using the Pre-CH Button to select the Previous Channel ..	15
Adjusting the Volume .....	15
Using Mute .....	15
Viewing the Display .....	16
Viewing the Menus .....	16

## Chapter 4: Operation

Plug & Play Feature .....	17
Memorizing the Channels .....	18
Selecting the Video Signal-source .....	18
Storing Channels in Memory (Automatic Method) .....	19
To check the channels stored in memory .....	19
To select channels over 100 .....	19
ADD and DEL Channels (Manual Method) .....	20
To Select TV/Input .....	20
To Edit the Input Source Name .....	21
Using Automatic Picture Settings .....	22
Customizing the Picture .....	23
Using Automatic Sound Settings .....	24
Customizing the Sound .....	25
Selecting a Menu Language .....	26
Setting the Blue Screen Mode .....	27

## CONTENTS

Fine Tuning Channels .....	28
Viewing Picture-in-Picture .....	29
Activating Picture-in-Picture .....	29
PIP Settings .....	29
Selecting a Signal Source (External A/V) for PIP .....	30
Swapping the Contents of the PIP and Main image .....	30
Changing the PIP Channel .....	30
Changing the Location of the PIP Window .....	30
Changing the Size of the PIP Window .....	30
Changing the Screen Size .....	31
Freezing the Picture .....	31
Adjusting the Color Tone .....	32
For automatic volume control .....	33
To select the WOW option. ....	34
Special Sound Options .....	35
Selecting the Main or Sub Sound .....	36
Adjusting the Headphone Sound .....	37
Setting the Clock .....	38
Setting the On/Off Timer .....	39
Setting the Sleep Timer .....	41
Viewing Closed Captions .....	42
Using the V-Chip .....	43
Setting Up Your Personal ID Number (PIN) .....	43
How to Enable/Disable the V-Chip .....	44
How to Set up Restrictions Using the 'TV guidelines' .....	44
How to Set up Restrictions using the MPAA Ratings:	
G, PG, PG-13, R, NC-17, X .....	46
How to Reset the TV after the V-Chip	
Blocks a Channel ('Emergency Escape') .....	47

## **Chapter 5: PC Display**

Using Your TV as a Computer (PC) Display .....	48
How to Set up Your PC Software (Windows only) .....	48
Adjusting the Screen Quality .....	49
Changing the Screen Position .....	50
How to Auto Adjust .....	51

## **Chapter 6: Troubleshooting**

Identifying Problems .....	52
----------------------------	----

## **Appendix**

How to assemble the TV set and stand base .....	54
Installing the Wall Mount Kit (sold separately) .....	55
Using the Anti-Theft Kensington Lock .....	56
Retractable Stand .....	56
Cleaning and Maintaining Your TV .....	57
Using Your TV in Another Country .....	57
Specifications .....	58
Display Modes .....	59

# Chapter One

## YOUR NEW TV

### List of Features

Your TV was designed with the latest technology. This TV is a high-performance unit that includes the following special features:

 
- Easy-to-use remote control
- Easy-to-use on-screen menu system
- Automatic timer to turn the TV on and off
- Adjustable picture and sound settings that can be stored in the TV's memory
- Automatic channel tuning for up to 181 channels
- A special filter to reduce or eliminate reception problems
- Fine tuning control for the sharpest picture possible
- A built-in multi-channel sound decoder for stereo and bilingual listening
- Built-in, dual channel speakers
- Headphone jack for private listening
- 16:9 letter box format available depending upon source

### List of Parts


Please make sure the following items are included with your LCD TV. If any items are missing, contact your dealer.




Remote Control  
(BN59-00362B) &  
Batteries (AAA x 2)

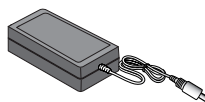


Adapter  
(BN44-00074A)

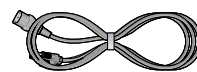 

Power Cord  
(BH39-10339X)

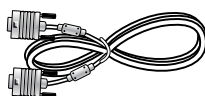 

 PC Video Cable  
15-pin D-Sub Signal Cable  
(BN39-00043A)

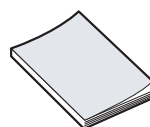


Owner's  
Instructions

## YOUR NEW TV
 
# Familiarizing Yourself with Your New TV

## Top Panel Buttons

The buttons on the top panel control your TV's basic features, including the on-screen menu. To use the more advanced features, you must use the remote control.

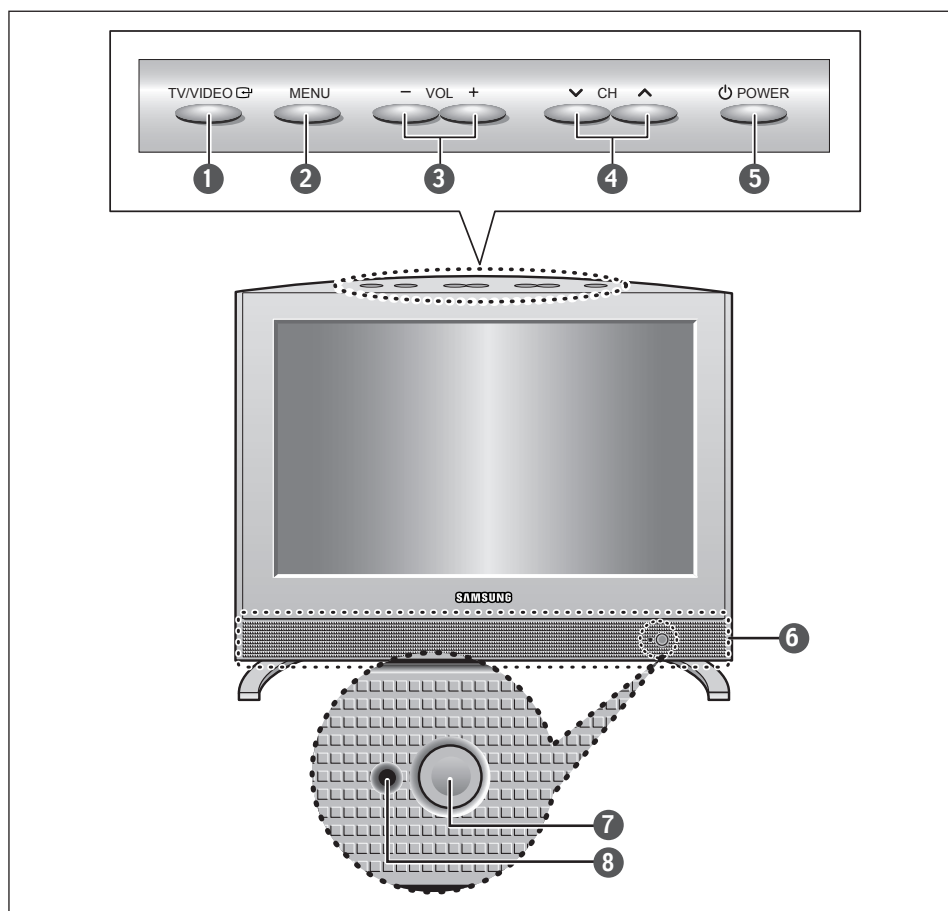


- |   |   |
|---|---|
| <p><b>1 TV/VIDEO</b> (See Page 20)<br/>Displays a menu of all of the available input sources (TV, VIDEO, S-VIDEO, Component 1, Component 2, PC).</p> <p><b>2 MENU</b><br/>Press to see an on-screen menu of your TV's features.</p> <p><b>3 - VOL +</b><br/>Press to increase or decrease the volume.</p> <p><b>4 V CH ^</b><br/>Press to change channels.<br/>Also press to highlight various items on the on-screen menu.</p> | <p><b>5 POWER</b><br/>Press to turn the TV on and off.</p> <p><b>6 SPEAKER</b></p> <p><b>7 REMOTE CONTROL SENSOR</b><br/>Aim the remote control towards this spot on the TV.</p> <p><b>8 POWER INDICATOR</b><br/>Lights up when you turn the power off.</p> |
|---|---|

## YOUR NEW TV
 
### Rear Panel Jacks

Use the rear panel jacks to connect an A/V component that will be connected continuously, such as a VCR or a DVD player.

For more information on connecting equipment, see pages 7-14.

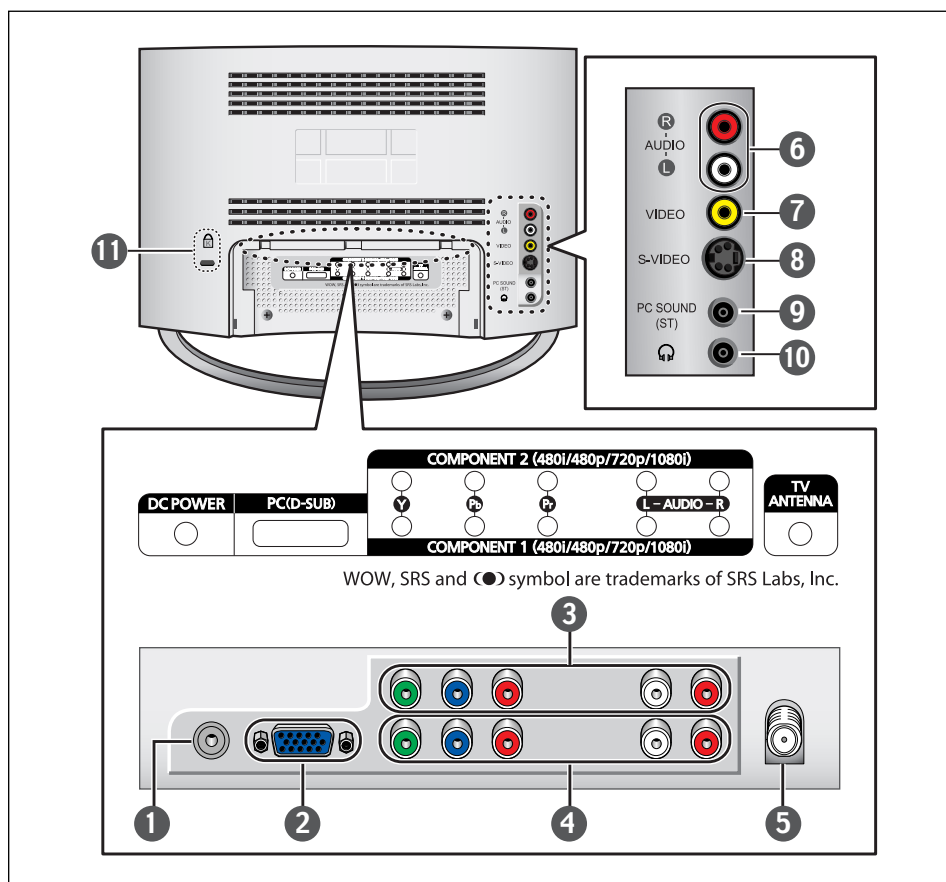

#### ❶ POWER INPUT

#### ❷ PC VIDEO INPUT

Connect to the video output port on your PC.

#### ❸ COMPONENT 2

Connect a component video/audio.

#### ❹ COMPONENT 1

Connect a component video/audio.

#### ❺ TV ANTENNA

Connects to an antenna or to a cable TV system.

#### ❻ AUDIO INPUT

Connect audio signal(L/R) from a camcorder or VCR.

#### ❼ VIDEO INPUT

Connect a video signal from a camcorder or VCR.

#### ❽ SUPER VIDEO INPUT

Connect an S-Video signal from a camcorder or VCR.

#### ❾ PC SOUND INPUT

#### ❿ HEADPHONE JACK

Connect a set of external headphones to this jack for private listening.

#### ⓫ KENSINGTON LOCK

(See page 56)



## YOUR NEW TV

### Remote Control

#### Frequently Used Buttons

You can use the remote control up to a distance of about 23 feet from the TV.  
When using the remote, always point it directly at the TV.

- 1 POWER**  
Turns the TV on and off.  
(See Page 15)

- 2 P.MODE**  
Adjusts the TV picture by selecting one of the preset factory settings.  
(See Page 22)

- 3 ASPECT**  
Use to toggle the five screen size options among Wide, Panorama, Zoom 1, Zoom 2 and Normal.  
(See Page 31)

- 4 MUTE**  
Press to temporarily cut off the sound. (See Page 15)

- 5 MENU**  
Displays the main on-screen menu.

 
- 6 PC MODE**  
Press to switch to the PC mode.

- 7 STILL**  
Press to stop the action during a particular scene. Press again to resume normal video.  
(See Page 31)

- 8 CH  $\wedge$  and CH  $\vee$  (Channel UP/Down)**  
Press CH  $\wedge$  or CH  $\vee$  to change channels.  
**VOL + and VOL -**  
Press to increase or decrease the volume.

- 9 TV/VIDEO**  
Press to display all of the available video sources.

- 10 JOYSTICK**  
Use to select on-screen menu items and change menu values.  
(The remote control will only function with VCR or DVD units that are compatible with the LCD TV.)

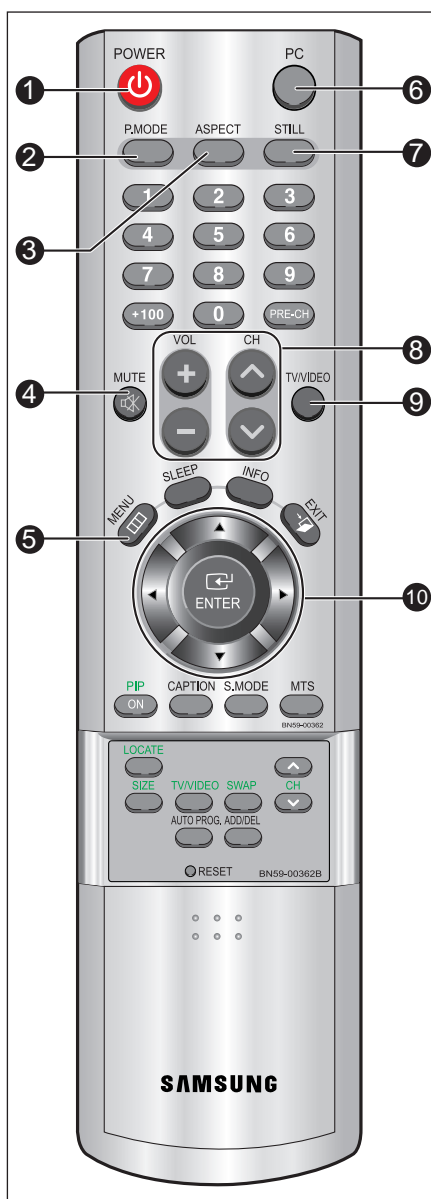

## YOUR NEW TV

### Convenient Buttons

You can use the remote control up to a distance of about 23 feet from the TV.  
When using the remote, always point it directly at the TV.

#### 1 **+100**

Press to select channels over 100.  
For example, to select channel 121, press "+100", then press "2" and "1".  
(See Page 19)

#### 2 **Sleep Timer**

Press to select a time for the TV to turn off automatically.  
(See Page 41)

#### 3 **PIP**

See the PIP screen section of this manual. (See Page 29)

**CAPTION** (See Page 42)

Press to set caption on/off.

#### **S.MODE**

Adjust the TV sound by selecting one of the preset factory settings (or select your personal, customized sound settings). (See Page 24)

#### **MTS**

(Multi channel Television Stereo)

Press to choose stereo, mono or Separate Audio Program (SAP broadcast). (See Page 35)

#### 4 **PIP controls** (See Page 29)

##### **LOCATE**

Press to move the PIP window to any of the four corners of the TV screen.

##### **SIZE**

Press to make the PIP window double, large or small.

##### **TV/VIDEO**

 
Press to select one of the available signal sources for the PIP window.

##### **SWAP**

Exchanges the video signal that is currently displayed on the main screen with the signal in the PIP window.

##### **CH**

Displays the available channels in sequence.  
(These buttons change channels in the PIP window only.)

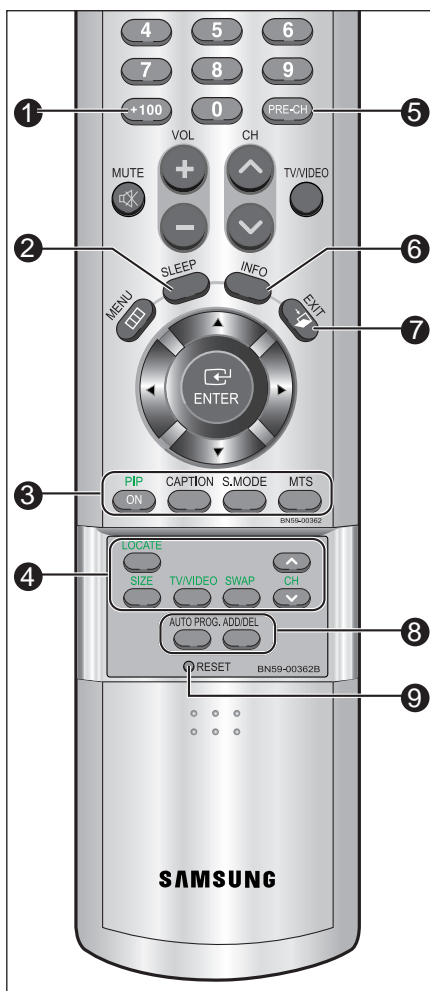

#### 5 **PRE-CH**

Tunes to the previous channel.  
(See Page 15)

#### 6 **Info Display**

Use to see information on the current broadcast. (See Page 16)

#### 7 **EXIT**

Press to exit the menu.

#### 8 **AUTO PROG.**

Use to store the broadcast/cable channels that you receive.  
(See Page 19)

#### **ADD/DEL**

Use to store and delete channels to/from memory. (See Page 20)

#### 9 **RESET**

 
When your remote does not work, change the batteries and press the RESET button for 2-3 seconds before use.

## YOUR NEW TV


### Installing Batteries in the Remote Control

**1**

Slide the cover out completely.

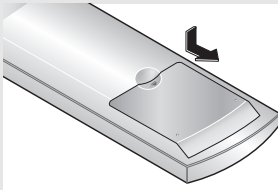**2**

 
Install two AAA size batteries.

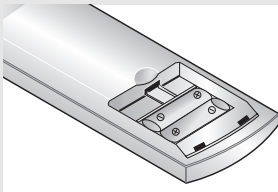

◀ Make sure to match the “+” and “-” ends of the batteries with the diagram inside the compartment.

**3**

 Replace the cover.

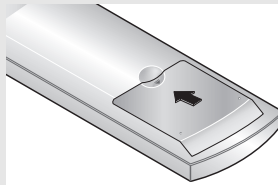

◀ Remove the batteries and store them in a cool, dry place if you won't be using the remote control for a long time.

The remote control can be used up to about 23 feet from the TV.

(Assuming typical TV usage, the batteries last for about one year.)

### The remote control doesn't work!

Check the following:

 
1. Is the TV power switch on?
2. Are the plus and minus ends of the batteries reversed?
3. Did the battery run out?
4. Is the power out, or is the power cord unplugged?
5. Is there a special fluorescent light or a neon sign nearby?

# Chapter Two


## INSTALLATION

### Connecting VHF and UHF Antennas

If your antenna has a set of leads that look like this, see “Antennas with 300-ohm Flat Twin Leads”, below.

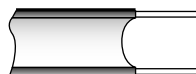

 If your antenna has one lead that looks like this, see “Antennas with 75-ohm Round Leads”, on page 8.

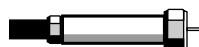


If you have two antennas, see “Separate VHF and UHF Antennas”, on page 8.

#### Antennas with 300-ohm Flat Twin Leads

 If you are using an off-air antenna (such as a roof antenna or “rabbit ears”) that has 300-ohm twin flat leads, follow the directions below.


**1**

Place the wires from the twin leads under the screws on a 300-75 ohm adaptor (not supplied). Use a screwdriver to tighten the screws.

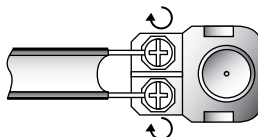

**2**

 Plug the adaptor into the TV ANTENNA terminal on the bottom of the back panel.

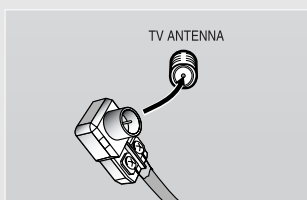


## INSTALLATION

### Antennas with 75-ohm Round Leads

**1**

 Plug the antenna lead into the TV ANTENNA terminal on the bottom of the back panel.

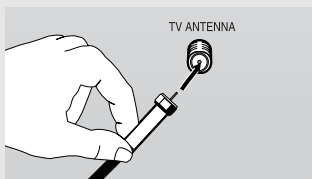


### Separate VHF and UHF Antennas

If you have two separate antennas for your TV (one VHF and one UHF), you must combine the two antenna signals before connecting the antennas to the TV. This procedure requires a an optional combiner-adaptor (available at most electronics shops).


**1**

 Connect both antenna leads to the combiner.

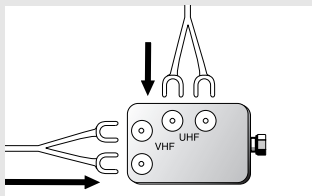

**2**

 Plug the combiner into the TV ANTENNA terminal on the bottom of the rear panel.

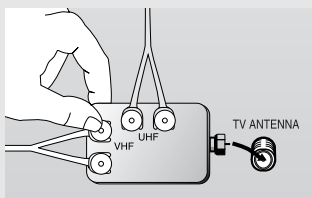


### Connecting Cable TV

To connect to a cable TV system, follow the instructions below.

#### Cable without a Cable Box

**1**

 Plug the incoming cable into the TV ANTENNA terminal on back of the TV.

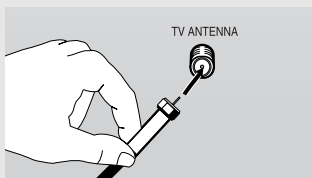


◀ Because this TV is cable-ready, you do not need a cable box to view unscrambled cable channels.

## INSTALLATION
 
### Connecting to a Cable Box that Descrambles All Channels

**1**


Find the cable that is connected to the ANTENNA OUT terminal on your cable box.

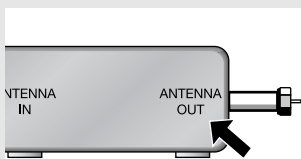

◀ This terminal might be labeled “ANT OUT”, “VHF OUT”, or simply, “OUT”.

**2**

 Connect the other end of this cable to the TV ANTENNA terminal on the back of the TV.

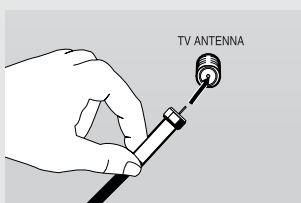


### Connecting to a Cable Box that Descrambles Some Channels

If your cable box descrambles only some channels (such as premium channels), follow the instructions below. You will need a two-way splitter, an RF (A/B) switch, and four lengths of coaxial cable. (These items are available at most electronics stores.)

**1**

 
Find and disconnect the cable that is connected to the ANTENNA IN terminal on your cable box.

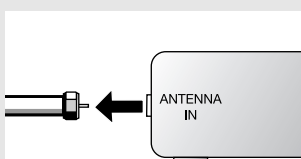

◀ This terminal might be labeled “ANT IN”, “VHF IN”, or simply, “IN”.


**2**

 Connect this cable to a two-way splitter.

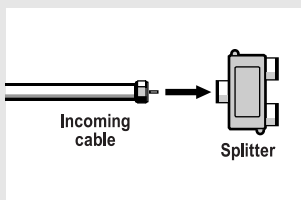

**3**

 
Connect a coaxial cable between an OUTPUT terminal on the splitter and the IN terminal on the cable box.

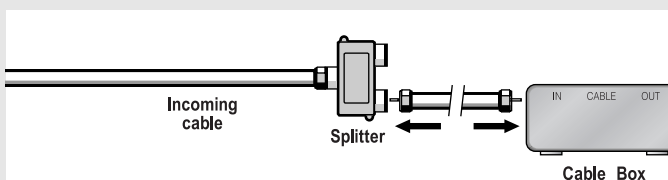

## INSTALLATION


**4**

 Connect a coaxial cable between the ANTENNA OUT terminal on the cable box and the B-IN terminal on the A/B switch.

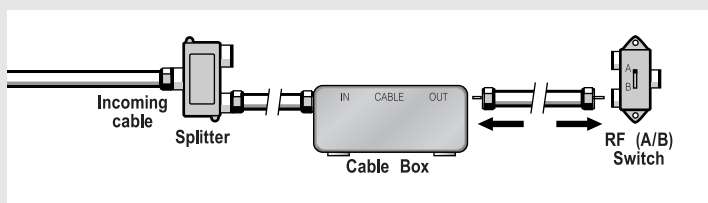


**5**

 Connect another cable between the other OUT terminal on the splitter and the A-IN terminal on the RF (A/B) switch.

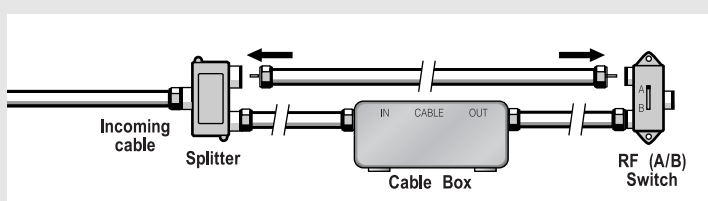

**6**

 Connect the last coaxial cable between the OUT terminal on the RF (A/B) switch and the VHF/UHF terminal on the rear of the TV.

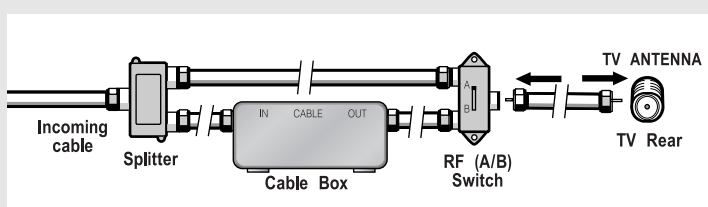

After you've made this connection, set the A/B switch to the "A" position for normal viewing. Set the A/B switch to the "B" position to view scrambled channels. (When you set the A/B switch to "B," you will need to tune your TV to the cable box's output channel, which is usually channel 3 or 4.)

## INSTALLATION

 
### Connecting a VCR

These instructions assume that you have already connected your TV to an antenna or a cable TV system (according to the instructions on pages 7-9).

Skip step 1 if you have not yet connected to an antenna or a cable system.


**1**

Unplug the cable or antenna from the back of the TV.

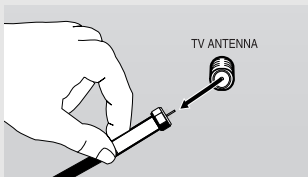


**2**

 Connect the cable or antenna to the ANTENNA IN terminal on the back of the VCR.

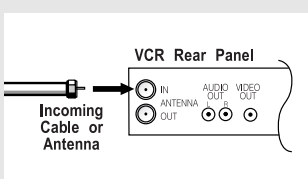

**3**

 
Connect a coaxial cable between the ANTENNA OUT terminal on the VCR and the antenna terminal on the TV.

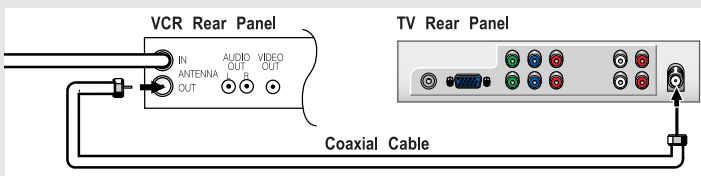

A coaxial cable is usually included with a VCR. (If not, check your local electronics store).

**4**

 
Connect a set of audio cables between the AUDIO OUT jacks on the VCR and the AUDIO jacks on the TV.

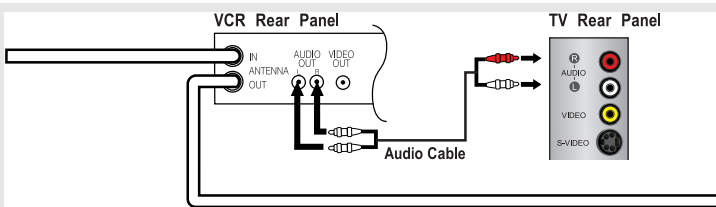

If you have a “mono” (non-stereo) VCR, use the Y-connector (not supplied) to hook up to the left and right audio input jacks of the TV. If your VCR is stereo, you must connect two cables.

**5**

 Connect a video cable between the VIDEO OUT jack on the VCR and the VIDEO jack on the TV.

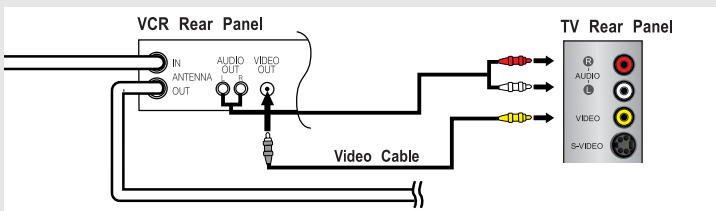

Follow the instructions in “Viewing a VCR or Camcorder Tape” to view your VCR tape.

# Each external input source device has a different back panel configuration.



 
## INSTALLATION

### Connecting an S-VHS VCR

Your Samsung TV can be connected to an S-Video signal from an S-VHS VCR.  
(This connection delivers a better picture as compared to a standard VHS VCR.)


#### 1

To begin, follow steps 1–3 in the previous section to connect the antenna or cable to your VCR and your TV.

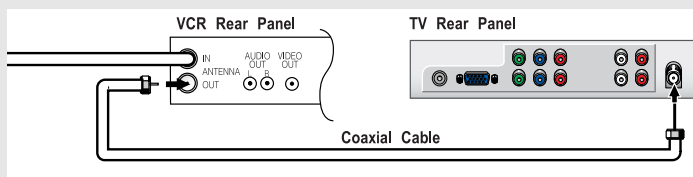


#### 2

 Connect a set of audio cables between the AUDIO OUT jacks on the VCR and the AUDIO INPUT jacks on the TV.

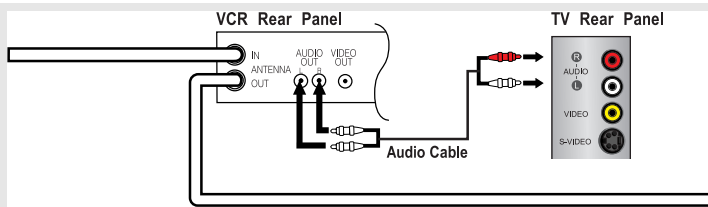

#### 3

 Connect an S-video cable between the S-VIDEO OUT jack on the VCR and the S-VIDEO INPUT jack on the TV.

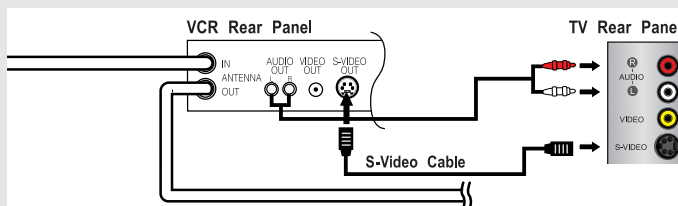

An S-video cable is usually included with an S-VHS VCR.

(If not, check your local electronics store.)

# Each external input source device has a different back panel configuration.

 
## INSTALLATION

### Connecting a DVD Player

The rear panel jacks on your TV make it easy to connect a DVD player to your TV.


**1**

Connect a set of audio cables between the L, R AUDIO INPUT jacks on the TV and the AUDIO OUT jacks on the DVD player.

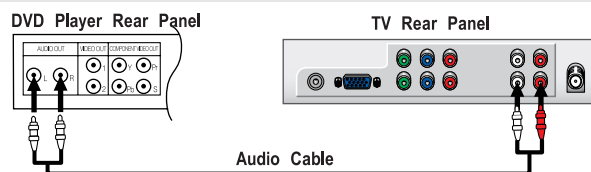

**2**

 Connect a video cable between the COMPONENT1 (Y, Pb, Pr) jacks on the TV and the Y, Pb, Pr jacks on the DVD player.

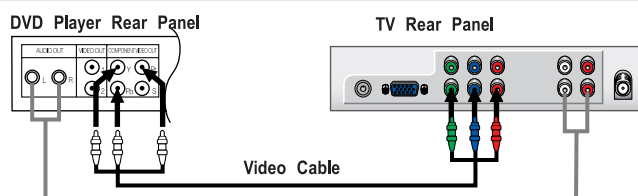


Note: For an explanation of Component video, see your DVD player owner's manual.

# Each external input source device has a different back panel configuration.
 
## INSTALLATION

### Connecting a PC

Note: This figure shows the Standard Connector-jack panel. The actual configuration on your TV may be different, depending on the model.

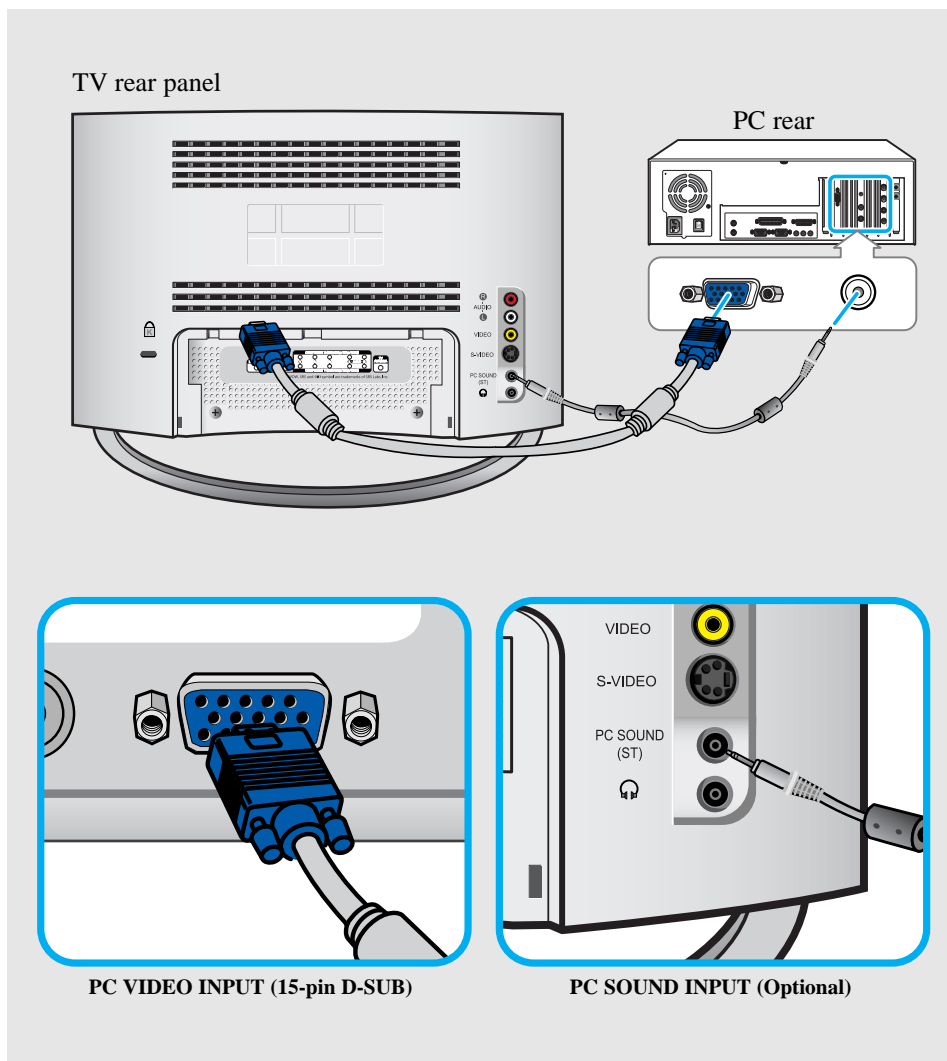

- **PC AUDIO INPUT**  
Connect these to the audio-output jacks on your PC.

- **PC VIDEO INPUT**  
Connect to the video output port on your PC.

# Each external input source device has a different back panel configuration.

# Chapter Three

## SPECIAL FEATURES

### Turning the TV On and Off

Press the **POWER** button.  
You can also use the Power button on the top panel.

### Changing Channels

#### Using the Channel Buttons

##### 1

Press the **CH**  $\wedge$  /  $\vee$  buttons to change channels.

When you press the **CH**  $\wedge$  /  $\vee$  buttons, the TV changes channels in sequence. You will see all the channels that the TV has memorized. (The TV must have memorized at least three channels.) You will not see channels that were either erased or not memorized.

#### Using the PRE-CH Button to select the Previous Channel

##### 1

Press the **PRE-CH** button.  
The TV will switch to the last channel viewed.

To quickly switch between two channels that are far apart, tune to one channel, then use the number button to select the second channel. Then, use the **PRE-CH** button to quickly alternate between them.

### Adjusting the Volume

##### 1


Press the **VOL**  $\pm$  buttons to increase or decrease the volume.

#### Using Mute

At any time, you can temporarily cut off the sound using the Mute button.

##### 1

Press **MUTE** and the sound cuts off.

The word “ Mute” will appear in the lower-left corner of the screen.

##### 2

To turn mute off, press the **MUTE** button again, or simply press the **VOL**  $\pm$  buttons.

## SPECIAL FEATURES

### Viewing the Display

The display identifies the current channel and the status of certain audio-video settings.

**1**

Press the **INFO** button on the remote control.

The TV will display the channel, the type of sound, and the status of certain picture and sound settings.

Air	3
Mono	
Picture	Dynamic
Sound	Custom
MTS	Stereo
WOW	Off
Clock	12 : 00 am

 
- ◀ The on-screen displays disappear after about ten seconds.
- ◀ Press the button once more or wait approximately 10 seconds and it disappears automatically.
- ◀ Allows the user to adjust the settings according to his/her preference and shows the current settings.

### Viewing the Menus

**1**

With the power on, press the **MENU** button.

The main menu appears on the screen. It's left side has five icons: Input, Picture, Sound, Channel and Setup.

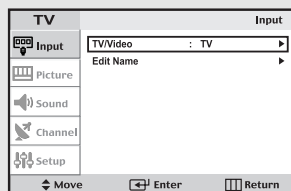

- ◀ The on-screen menus disappear from the screen after about thirty seconds.

**2**

Use the **UP/DOWN ▲▼** buttons to select one of the 5 icons. Then press **ENTER( )** to access the icon's sub-menu.

**3**

Press the **MENU** button to exit.

- ◀ You can also use the TV/Video( ) buttons on the control panel of the TV to make selections.

# Chapter Four

## OPERATION

### Plug & Play Feature

When the TV is initially powered On, two basic customer settings proceed automatically and subsequently: Setting Auto program, Clock.


#### 1


Press the **POWER** button on the remote control.

The message "Plug & Play" is displayed.

Plug & Play

#### 2

 
Press the **UP/DOWN ▲▼** buttons to select "English", then press the **ENTER**  button.


Press the **UP/DOWN ▲▼** buttons to select "Air", then press the **ENTER**  button.

Language	
English	
Français	
Español	
Português	
◀ Move	Enter ▶▶ Stop


Air/CATV	
Air	
STD	
HRC	
IRC	
◀ Move	Enter ▶▶ Stop

#### 3

 Press the **ENTER**  Button. The TV will begin memorizing all of the available channels.

Press the **ENTER**  button to stop.

Auto Program	
Antenna Input Check	
Start	Exit
◀ Move	Enter ▶▶ Clock

Auto Program	
	Air 43
Stop	Exit
◀ Move	Enter ▶▶ Clock

#### 4

Press the **LEFT/RIGHT ◀▶** buttons to move to the hour or minute. Set the hour or minute by pressing the **UP/DOWN ▲▼** buttons. (refer to "Setting the Clock" on page 38.)

Clock		
Hour	Minute	am/pm
12	05	am
◀ Move	Adjust	▶▶ Stop

#### 5

The message "Enjoy your watching." is displayed.

Enjoy your watching

## OPERATION

### Memorizing the Channels

Your TV can memorize and store all of the available channels for both “off-air” (antenna) and cable channels. After the available channels are memorized, use the CH  $\wedge$  and CH  $\vee$  buttons to scan through the channels. This eliminates the need to change channels by entering the channel digits. There are three steps for memorizing channels: selecting a broadcast source, memorizing the channels (automatic) and adding and deleting channels (manual).

 
#### Selecting the Video Signal-source

Before your television can begin memorizing the available channels, you must specify the type of signal source that is connected to the TV (i.e., an antenna or a cable system).

#### 1

Press the **MENU** button to display the menu.

Press the **UP/DOWN**  $\blacktriangle/\blacktriangledown$  buttons to select “Channel”, then press the **ENTER**  $\blacksquare$  button.

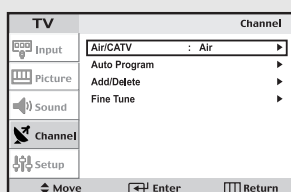


#### 2

Repeatedly press the **ENTER**  $\blacksquare$  button to cycle through these choices:

Air (antenna), STD, HRC or IRC (all cable TV).

 Press the **UP/DOWN**  $\blacktriangle/\blacktriangledown$  buttons to select the Video signal source, then press the **ENTER**  $\blacksquare$  button.

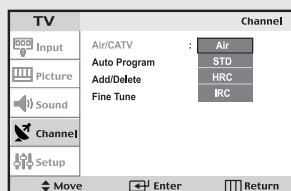

Note : STD, HRC and IRC identify various types of cable TV systems. Contact your local cable company to identify the type of cable system that exists in your particular area.

At this point the signal source has been selected.  
Proceed to “Storing Channels in Memory” (next page).


## OPERATION

 
### Storing Channels in Memory (Automatic Method)

**1**


First, select the correct signal source (Air, STD, HRC, IRC). See steps 1~2 on previous page.


Press the **MENU** button.

Press the **UP/DOWN ▲▼** buttons to select "Channel", then press the **ENTER**  button.

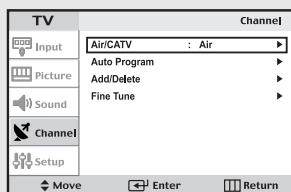


**2**

 
Press the **UP/DOWN ▲▼** buttons to select "Auto program". Press the **ENTER**  button.

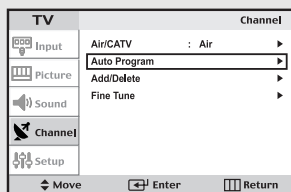

**3**

Press the **ENTER**  button.

 
The TV will begin memorizing all of the available channels.

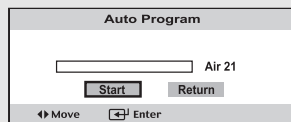


**4**

 After all the available channels are stored, the Auto program menu reappears.

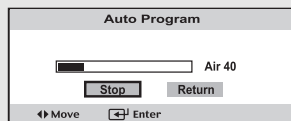

Press the **MENU** button to exit.



◀ The TV automatically cycles through all of the available channels and stores them in memory. This takes about one to two minutes.

Press **ENTER**  at any time to interrupt the memorization process and return to the CHANNEL menu.

### To check the channels stored in memory

Press the **CH**  /  button.

- Only the channels stored in memory are selected.

### To select channels over 100,

Ex) Press  →  →  to select channel 108.



## OPERATION

### ADD and DEL Channels (Manual Method)

**1**

 
 
 
Use the number buttons to directly select the channel to Add or Delete.

Press the **MENU** button to display the menu.

Press the **UP/DOWN ▲▼** buttons to select "Channel", then press the **ENTER** button.

Press the **UP/DOWN ▲▼** buttons to select "Add/Delete".  
Press the **ENTER** button.

Press the **LEFT/RIGHT ◀▶** buttons to select "Add" or "Delete".  
Press the **ENTER** button.  
Press the **EXIT** button.

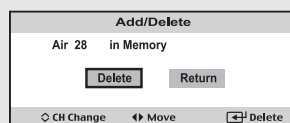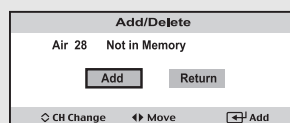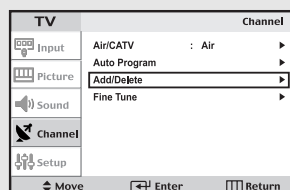

### 2(Alternate method)

Press the **ADD/DEL** button.

Repeatedly pressing **ENTER** will alternate between "Add" and "Delete".

Press the **LEFT/RIGHT ◀▶** buttons to select Exit, then press **ENTER** to exit.

You can view any channel (including an erased channel) by using the number buttons on the remote control.

 
### To Select TV/Input

Use to select TV or other external input sources connected to the TV.  
Use to select the screen of your choice.

**1**

Press the **MENU** button to display the on-screen menu.

Press the **ENTER** button.

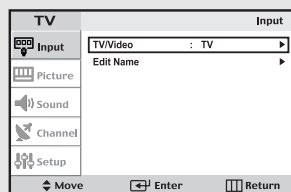


**2**

Press the **ENTER** button to select "TV", then press the **ENTER** button.

**3**

 Press the **UP/DOWN ▲▼** buttons to select the Input source, then press **ENTER**.

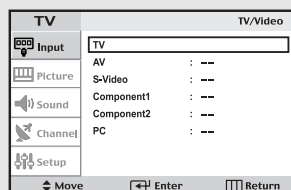


## OPERATION

### To Edit the Input Source Name

Name the input device connected to the input jacks to make your input source selection easier.


# 1

 Press the **UP/DOWN ▲▼** buttons to select "Edit Name", then press the **ENTER** button.

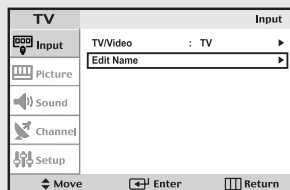

# 2


 
Press the **UP/DOWN ▲▼** buttons to select "AV", "S-Video", "Component1", "Component2" or "PC" then press the **ENTER** button.

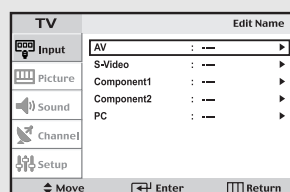

# 3

Press the **UP/DOWN ▲▼** buttons repeatedly until the correct VCR appears.

  After the VCR is entered, press the **ENTER** button.

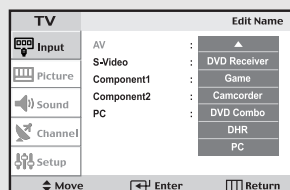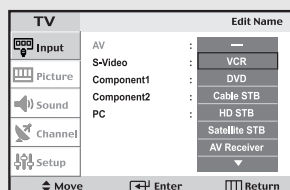


## OPERATION

 
### Using Automatic Picture Settings

Your TV has four automatic picture settings (“Custom”, “Dynamic”, “Standard”, and “Movie”) that are preset at the factory. You can activate either Dynamic, Standard, or Movie by pressing P.MODE (or by making a selection from the menu). Or, you can select “Custom” which automatically recalls your personalized picture settings.

#### 1


Press the **MENU** button to display the menu.


Press the **UP/DOWN ▲▼** buttons to select “Picture”, then press the **ENTER**  button.

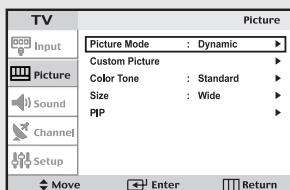

#### 2

 Press the **UP/DOWN ▲▼** buttons to select the “Dynamic”, “Standard”, “Movie” or “Custom” picture setting.

 Press **ENTER**  .  
Press **MENU** twice to exit.

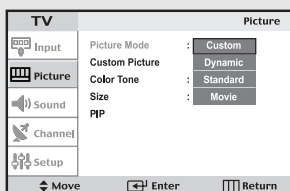

#### Alternate method:

Simply press the **P.MODE** button on the remote control to select one of the standard picture settings.

- Choose *Dynamic* to increase the clarity and sharpness of the picture.
- Choose *Standard* for the standard factory settings.
- Choose *Movie* when viewing the Movie.
- Choose *Custom* if you want to adjust the settings according to personal preference (see “Customizing the Picture, page 23).

## OPERATION

 
### Customizing the Picture

You can use the on-screen menus to change the contrast, brightness, sharpness, color and tint according to personal preference. (Alternatively, you can use one of the “automatic” settings. See previous page.)

#### 1


Press the **MENU** button to display the menu.

Press the **UP/DOWN ▲▼** buttons to select “Picture”, then press the **ENTER** button.

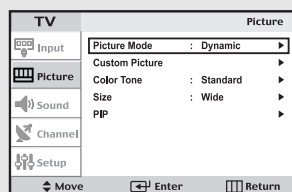


#### 2

 Press the **UP/DOWN ▲▼** buttons to select “Custom Picture”, then press the **ENTER** button.

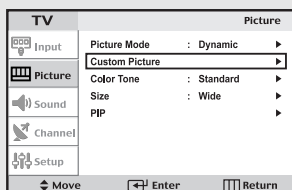

#### 3

 
Press the **ENTER** button to select a particular item.

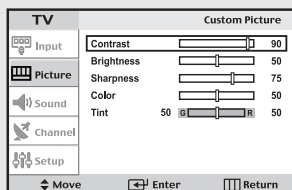

#### 4

Press the **LEFT/RIGHT ◀▶** buttons to decrease or increase the value of a particular item. For example, if you select “Contrast”, pressing **ENTER** increases it.

 Press the **MENU** button to exit.

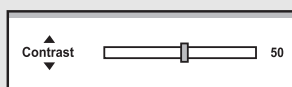

Press the **UP/DOWN ▲▼** buttons to select Contrast, Brightness, Sharpness, Color or Tint.


## OPERATION

 
### Using Automatic Sound Settings


Your TV has five automatic sound settings (“Custom”, “Standard”, “Music”, “Movie” and “Speech”) that are preset at the factory. You can activate any of them by pressing the S.MODE button (or by making a selection from the on-screen menu). Or, you can select “Custom Sound”, which automatically recalls your personalized sound settings.

#### 1

Press the **MENU** button to display the menu.


Press the **UP/DOWN ▲▼** buttons to select “Sound”, then press the **ENTER**  button.

 Press the **UP/DOWN ▲▼** buttons to select “Sound Mode”, then press the **ENTER**  button.

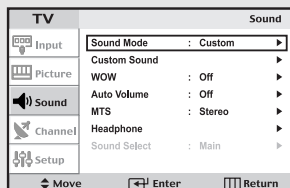

#### 2

 Press the **UP/DOWN ▲▼** buttons repeatedly to select the “Standard”, “Music”, “Movie”, “Speech”, or “Custom” sound settings. Press **MENU** to exit.

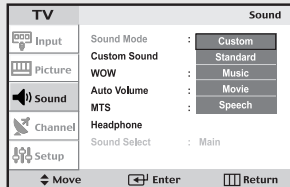

#### Alternate method:

Simply press the the **S.MODE** button on the remote control to select one of the standard sound settings.

- Choose *Standard* for the standard factory settings.
- Choose *Music* when watching music videos or concerts.
- Choose *Movie* when watching movies.
- Choose *Speech* when watching a show that is mostly dialogue (i.e., news).
- Choose *Custom* to recall your personalized settings.

## OPERATION


### Customizing the Sound

 
The sound settings can be adjusted to suit your personal preference.

(Alternatively, you can use one of the “automatic” settings. See previous page.)


# 1


Press the **MENU** button to display the menu.

Press the **UP/DOWN ▲▼** buttons to select “Sound”, then press the **ENTER**  button.

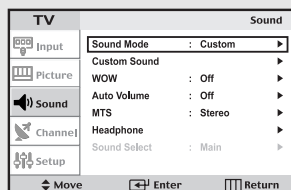

# 2

 Press the **UP/DOWN ▲▼** buttons to select “Custom Sound”, then press the **ENTER**  button.

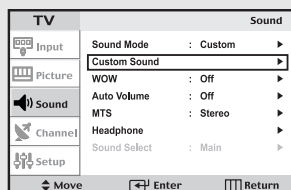


# 3

Press the **LEFT/RIGHT ◀▶** buttons to select a particular item to be changed.

Press the **UP/DOWN ▲▼** buttons to increase or decrease the value of a particular item.

 Press the **MENU** button to exit.

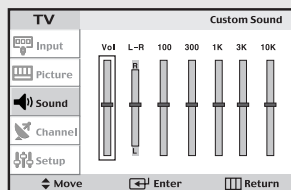


## OPERATION

### Selecting a Menu Language

# 1

Press the **MENU** button to display the menu.

 
Press the **UP/DOWN ▲▼** buttons to select "Setup", then press the **ENTER** button.

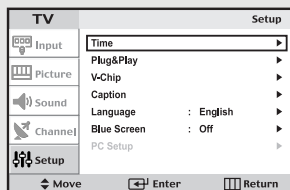

# 2

Press the **UP/DOWN ▲▼** buttons to select Language.

 
Press the **ENTER** button.

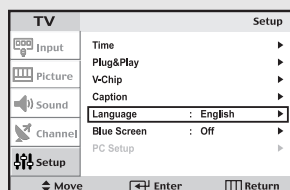

# 3

Press the **UP/DOWN ▲▼** buttons to select Language, Français, Español, English or Português.

 Press the **MENU** button to exit.

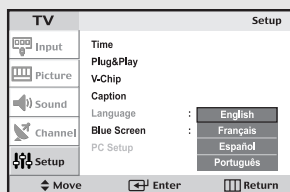

## OPERATION


### Setting the Blue Screen Mode

 
If no signal is being received or the signal is very weak, a blue screen automatically replaces the noisy picture background.

If you wish to continue viewing the poor picture, you must set the “Blue screen” mode to “Off”.


# 1


Press the **MENU** button to display the menu.

Press the **UP/DOWN ▲▼** buttons to select “Setup”, then press the **ENTER**  button.

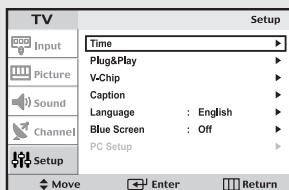

# 2

  
Press the **UP/DOWN ▲▼** buttons to select “Blue Screen”, then press the **ENTER**  button.

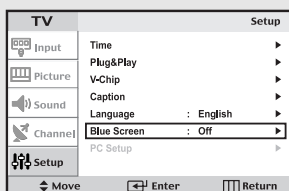

# 3

Press the **UP/DOWN ▲▼** buttons to set Blue Screen “On” or “Off”.

 Press the **MENU** button to exit.

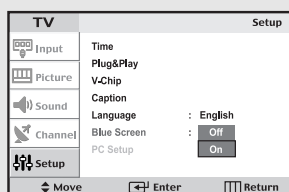

◀ Pressing the **UP/DOWN ▲▼** buttons will alternate between “On” and “Off”.



## OPERATION

### Fine Tuning Channels

Use fine tuning to manually adjust a particular channel for optimal reception.

 
**1**

Select the appropriate channel.

**2**


Press the **MENU** button to display the menu.

Press the **UP/DOWN ▲▼** buttons to select "Channel", then press the **ENTER** button.

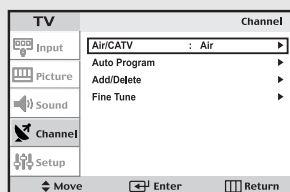


**3**

 Press the **UP/DOWN ▲▼** buttons to select "Fine Tune", then press the **ENTER** button.

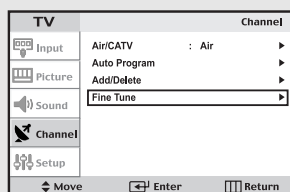

**4**

 Press the **RIGHT ►** and **LEFT ◀** buttons to adjust the fine tuning.


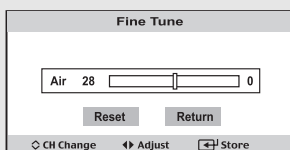


**5**

To store the fine tuning setting in the TV's memory, press the **ENTER** button.

To reset the fine tuning, press the **UP/DOWN ▲▼** buttons to select "Reset", then press the **ENTER** button.

  Press the **MENU** button to exit.

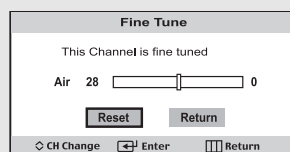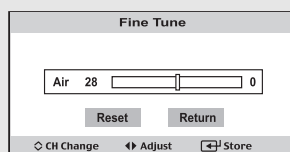

◀ If you do not store the channel in memory, adjustments to the settings are applied before you change the channel but are not saved. Therefore they return to the original settings once you move to another channel. User-adjusted channels are marked with an asterisk "\*" on the right-hand side of the channel number in the channel banner.

## OPERATION

### Viewing Picture-in-Picture

This product has one tuner built-in, which does not allow PIP to function in the same mode. Please see 'PIP Settings' below for details.


You can use the PIP feature to simultaneously watch two video sources.

 
Note: While V-Chip is in operation, the PIP function cannot be used.

### Activating Picture-in-Picture

# 1


Press the **MENU** button to display the menu.


Press the **UP/DOWN ▲▼** buttons to select "Picture", then press the **ENTER**  button. Press the **UP/DOWN ▲▼** buttons to select "PIP".

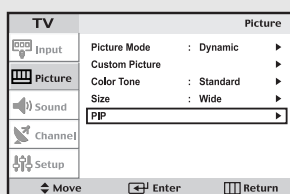

◀ Quick way to access the PIP menu:  
Simply press the PIP button on the remote control.

# 2

 Press the **ENTER**  button to select PIP "Off".

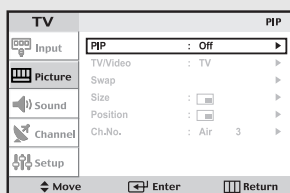

◀ If you turn the TV off while watching and turn it on again, the PIP window will disappear.

# 3

Press the **MENU** button to exit.

Note: Picture-in-Picture does not function when the V-chip is active.

### PIP Settings

O : PIP operates  
X : PIP doesn't operate

Sub Picture Main Picture	TV	AV	S-Video	Component 1	Component 2	PC
TV	X	X	X	O	O	O
AV	X	X	X	O	O	O
S-Video	X	X	X	O	O	O
Component 1	O	O	O	X	X	X
Component 2	O	O	O	X	X	X
PC	O	O	O	X	X	X

## OPERATION

### Selecting a Signal Source (External A/V) for PIP

Press the **TV/VIDEO(PIP)** button repeatedly to cycle through all of the available signal sources: "TV", "AV", "S-Video", "Component 1", "Component 2" and "PC".

◀ If you select "TV", the PIP image is the same as the main image.

\* You can change the PIP Screen according to the Main Source.  
(See the PIP Settings on page 29.)

### Swapping the Contents of the PIP and Main image

When you press the **SWAP** button, the image in the PIP window will appear on the main screen, and vice versa.

### Changing the PIP Channel



Press the PIP **CH** ^/∨ button to change the channel that appears in the PIP window.

### Changing the Location of the PIP Window

When you press the **LOCATE** button repeatedly, the PIP window moves from corner to corner on the TV screen.

### Changing the Size of the PIP Window

Press the **SIZE** button to alternate between a smaller and larger PIP window.

 
- When the PC is in energy saving mode, you cannot choose the PIP option.
- Press the  button once more to deselect PIP mode.
- You may notice that the picture in the PIP window becomes slightly unnatural when you set the main screen to game or karaoke mode. Switch the main screen and the PIP window for normal viewing.
- You can adjust picture position only by using the  size menu.

## OPERATION

### Changing the Screen Size

**1**

Press the **ASPECT** button to change the screen size.

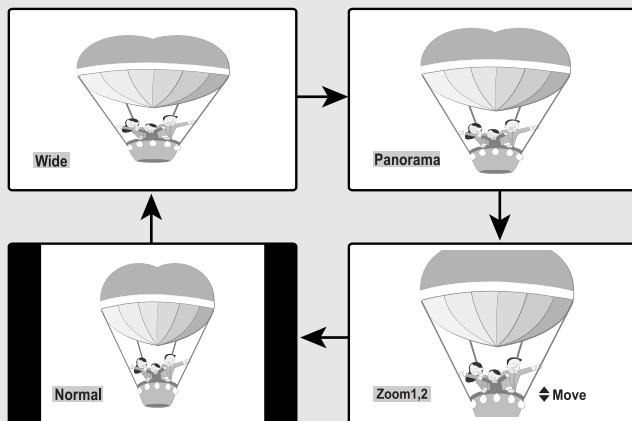

- **Wide:** Sets the picture to 16:9 wide mode.
- **Panorama :** Use this mode for the wide aspect ratio of a panoramic picture.
- **Zoom 1,2 :** Magnifies the size of the picture on screen.
- **Normal:** Sets the picture to 4:3 normal mode.  
This is the standard TV screen size.

### Freezing the Picture

**1**

Press the **STILL** button to freeze a moving picture.

- Normal sound will still be heard.
- Press again to cancel.


## OPERATION

 
## Adjusting the Color Tone

You can change the color of the entire screen according to your preference.


## 1


Press the **MENU** button to display the menu.

Press the **UP/DOWN ▲▼** buttons to select “Picture”, then press the **ENTER**  button.

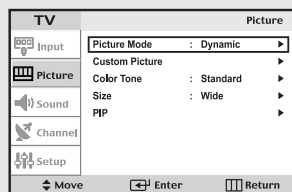

2

 
Press the **UP/DOWN ▲▼** buttons to select “Color Tone”, then press the **ENTER ** button.

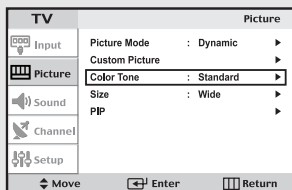

## 3

Press the  
**UP/DOWN ▲▼** buttons  
to select Color Tone.

 Press the **MENU** button to exit.

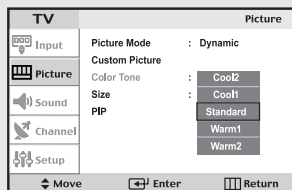

◀ You can select  
“Cool 2”, “Cool 1”, “Standard”,  
“Warm 1”, “Warm 2” color tones  
according to personal preference.

## OPERATION

 
### For automatic volume control

Reduces the differences in volume level among broadcasters.

#### 1


Press the **MENU** button to display the menu.

Press the **UP/DOWN ▲▼** buttons to select "Sound", then press the **ENTER** button.

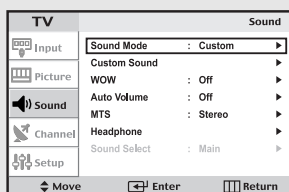

#### 2

 
Press the **UP/DOWN ▲▼** buttons to select "Auto Volume", then press the **ENTER** button.

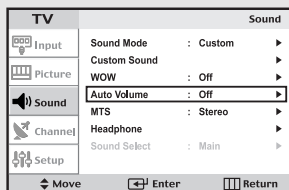

#### 3

Press the **UP/DOWN ▲▼** buttons to set Auto Volume "On".

 Press the **MENU** button to exit.

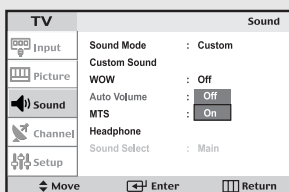

## OPERATION

 
### To select the WOW option

Emphasizes mid- and low-range sounds or gives you a surround-sound experience.

**1**


Press the **MENU** button to display the menu.

Press the **UP/DOWN▲▼** buttons to select "Sound", then press the **ENTER** button.

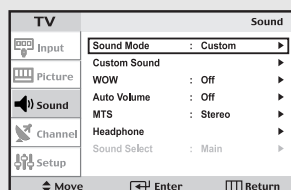

**2**

 
Press the **UP/DOWN▲▼** buttons to select "WOW", then press the **ENTER** button.

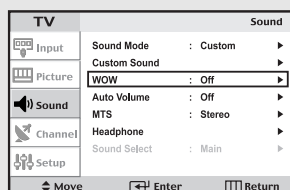

**3**

Press the **UP/DOWN▲▼** buttons to set WOW "On".

 
Press the **MENU** button to exit.

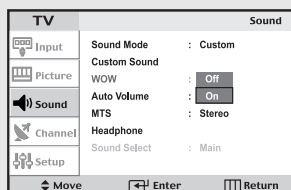

### TRADEMARK & LABEL LICENSE NOTICE



is a trademark of SRS Labs, Inc.  
WOW technology is incorporated under license from SRS labs, Inc.

Or  
WOW, SRS and  symbol are trademarks of SRS Labs, Inc.  
WOW technology is incorporated under license from SRS labs, Inc.

## OPERATION

### Special Sound Options

 
#### Choosing a Multi-Channel Sound (MTS) Soundtrack

Depending on the particular program being broadcast, you can listen to stereo, mono, or a Separate Audio Program. (SAP audio is usually a foreign-language translation. Sometimes SAP has unrelated information like news or weather.)

### 1


Press the **MENU** button to display the menu.

Press the **UP/DOWN ▲▼** buttons to select “Sound”, then press the **ENTER** button.

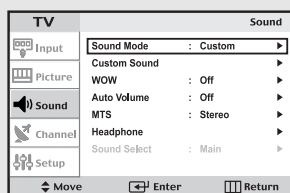


### 2

 Press the **UP/DOWN ▲▼** buttons to select “MTS”, then press the **ENTER** button.

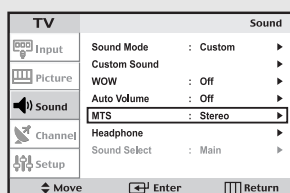

### 3

 Press the **UP/DOWN ▲▼** buttons to select “Mono”, “Stereo” or “SAP”, then press the **ENTER** button.

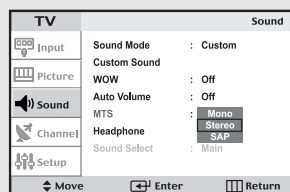

◀Note : The text at the bottom of the menu tells you if the incoming audio is Mono, Stereo or SAP.

- Choose *Stereo* for channels that are broadcasting in stereo.
- Choose *Mono* for channels that are broadcasting in mono, or if you are having difficulty receiving a stereo signal.
- Choose *SAP* to listen to the Separate Audio Program, which is usually a foreign-language translation.

You can also change the MTS setting by pressing the “MTS” button on the remote control. (When you change channels, MTS is set to “Stereo” automatically. To listen in ‘SAP’ or ‘Mono,’ change the MTS setting.)



## OPERATION

 
### Selecting the Main or Sub Sound

You can select either Main or Sub when PIP is On.

#### 1


Press the **MENU** button to display the menu.

Press the **UP/DOWN ▲▼** buttons to select "Sound", then press the **ENTER** button.

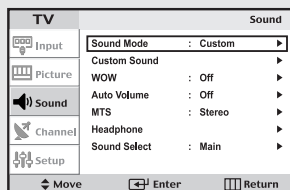

#### 2

 Press the **UP/DOWN ▲▼** buttons to select "Sound Select", then press the **ENTER** button.

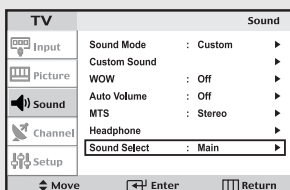


#### 3

Press the **ENTER** button to select "Main" or "Sub".

Select "Main" to hear the main TV sound and select "Sub" to hear the PIP window sound.

 Press the **MENU** button to exit.

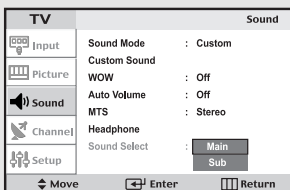

◀Note : Sound Select can also be used to select the Main or Sub sound over the speakers.

## OPERATION

 
### Adjusting the Headphone Sound

The headphone option is especially useful when simultaneously watching the main screen and the PIP window.

**1**

Press the **MENU** button to display the menu.


Press the **UP/DOWN▲▼** buttons to select "Sound", then press the **ENTER** button.

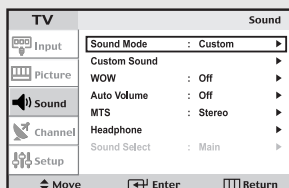

◀Note : Headphones must be purchased separately.


**2**

 Press the **UP/DOWN▲▼** buttons to select "Headphone" and press the **ENTER** button.

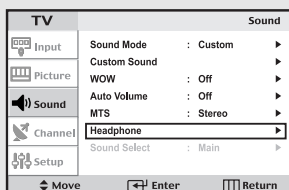


**3**

 Press the **UP/DOWN▲▼** buttons, then press the **ENTER** button to select the particular item to be changed.

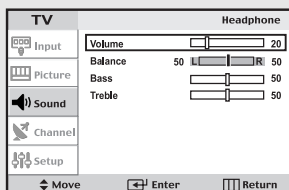

**4**

 Press the **LEFT/RIGHT◀▶** buttons to decrease or increase the value of a particular item.

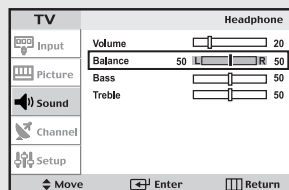

## OPERATION

 
### Setting the Clock

Setting the clock is necessary in order to use the various timer features of the TV. Also, you can check the time while watching the TV. (Just press the INFO button.)

# 1


Press the **MENU** button to display the on-screen menu.

Press the **UP/DOWN ▲▼** buttons to select "Setup", then press the **ENTER** button.

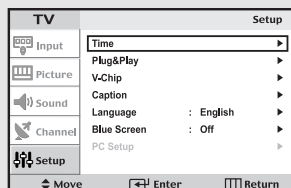

# 2

 Press the **ENTER** button to select "Time" and press the **ENTER** button to select "Clock".

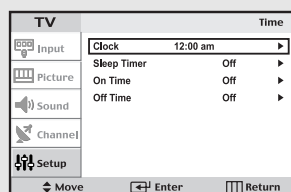


# 3

Press the **UP/DOWN ▲▼** buttons repeatedly until the correct hour appears.

Press the **LEFT/RIGHT ◀▶** buttons to select "Minute".

Press the **UP/DOWN ▲▼** buttons until the correct minute appears.

 Press the **LEFT/RIGHT ◀▶** buttons to select am/pm and adjust with the **UP/DOWN ▲▼** buttons. Press the **MENU** button to Exit.

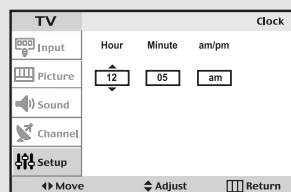


◀Note : You can also set the time using the numeric buttons on the remote.


## OPERATION
 
### Setting the On/Off Timer

# 1


Press the **MENU** button to display the on-screen menu.


Press the **UP/DOWN ▲▼** buttons to select "Setup", then press the **ENTER**  button twice.

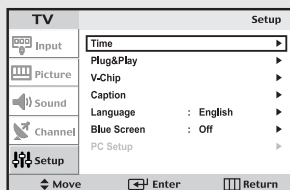

▲ Before using the timer, you must set the TV's clock.  
(See "Setting the Clock" on page 38)

# 2

 Press the **UP/DOWN ▲▼** buttons to select "On Time" or "Off Time", then press the **ENTER**  button.

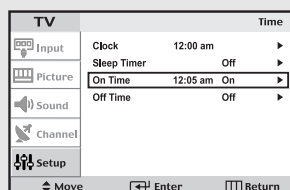


▲ When you set the hours, make sure the correct time of day (am or pm) appears to the right of the time.

# 3

 
Press the **UP/DOWN ▲▼** buttons repeatedly to select the appropriate hour.

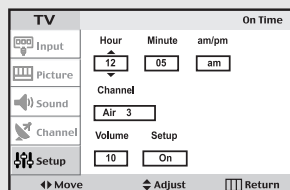

Press the **LEFT/RIGHT ◀▶** buttons repeatedly to select the appropriate minute (i.e., the time when the TV will turn on).




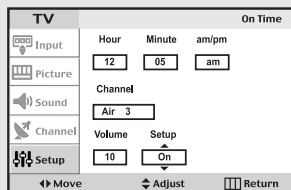 
## OPERATION

### 4

Press the **LEFT/RIGHT**  buttons to select Setup.


Press the **UP/DOWN**  buttons to on-timer "On".  
(Repeatedly pressing the **UP/DOWN**  buttons will alternate between On and Off.)


When finished, press the **ENTER**  button.

 
 


◀ To deactivate the "On time," select "Off" during this step.

### 5

To set the Off time, press the **UP/DOWN**  buttons to select "Off time".

Press the **ENTER**  button and set the hours and minutes. (Follow the same procedure as in steps 1~4 above.)

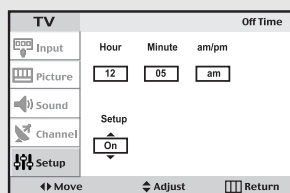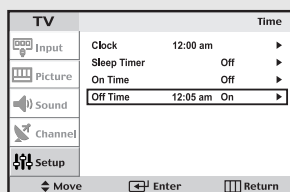

### 6

When finished setting the timer, press the **MENU** button to exit.

#### • Auto Power Off

When you set the timer on, your television will be turned off if you do not operate any controls for 3 hours after the TV has been turned on with the 'Timer On' function. 'Auto power off' operates only when the TV has been turned on by the 'Timer on' function.

## OPERATION

### Setting the Sleep Timer

Set the timer for the TV to turn off at the preset time automatically.

 
#### Setting the On/Off Timer Using the Menu

#### 1

Press the **MENU** button to display the on-screen menu.


Press the **UP/DOWN ▲▼** buttons to select "Setup", then press the **ENTER** button.

Press the **ENTER** button to select "Time".

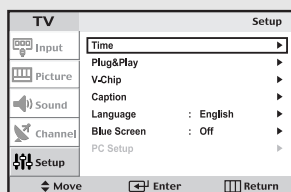


#### 2

 Press the **UP/DOWN ▲▼** buttons to select "Sleep Timer", then press the **ENTER** button.

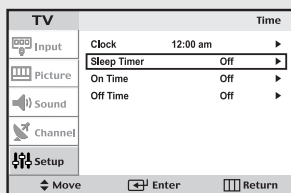


#### 3

 Press the **UP/DOWN ▲▼** buttons repeatedly until the correct time appears.

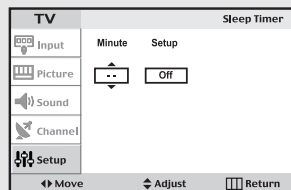

- **Easy Way to Set the Sleep Timer**

Press the  button on the remote.

The number on the screen changes from Off • 30 • 60 • 90 • 120 • 150 • 180 • Off

## OPERATION

 
### Viewing Closed Captions

Your TV decodes and displays the closed captions that are broadcast with certain TV shows. These captions are usually subtitles for the hearing impaired or foreign-language translations. All VCRs record the closed caption signal from television programs, so home-recorded video tapes also provide closed captions. Most pre-recorded commercial video tapes provide closed captions as well. Check for the closed caption symbol in your television schedule and on the tape's packaging: **CC**.

#### 1


Press the **MENU** button to display the on-screen menu.

Press the **UP/DOWN ▲▼** buttons to select "Setup", then press the **ENTER** button.

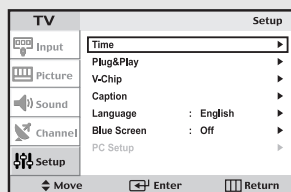


#### 2

 Press the **UP/DOWN ▲▼** buttons to select "Caption", then press the **ENTER** button.

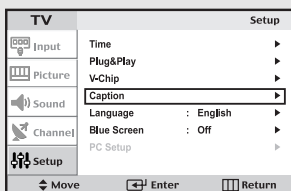

#### 3

 
Press the **ENTER** button to select "Off".

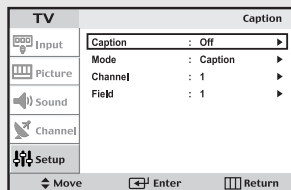

#### 4

Press the **UP/DOWN ▲▼** buttons to set caption "On/Off", then press the **ENTER** button.

 Press the **MENU** button to exit.

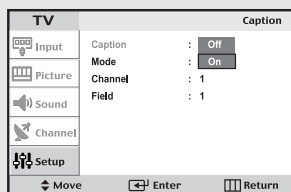

#### 5

Depending on the particular broadcast, it might be necessary to make changes to "Channel" and "Filed": Press the **MENU** button to exit the menu.

◀ Different channels and fields display different information: Field 2 carries additional information that supplements the information in Field 1. (For example, Channel 1 may have subtitles in English, while Channel 2 has subtitles in Spanish.)

## OPERATION

### Using the V-Chip


The V-Chip feature automatically locks out programming that is deemed inappropriate for children. The user must first enter a Pin (personal ID number) before any of the V-Chip restrictions can be set up or changed.

#### Setting Up Your Personal ID Number (PIN)

**1**


Press the **MENU** button to display the menu.

 Press the **UP/DOWN ▲▼** buttons to select "Setup", then press the **ENTER** button.

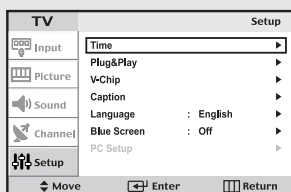


**2**

 Press the **UP/DOWN ▲▼** buttons to select "V-Chip", then press the **ENTER** button.

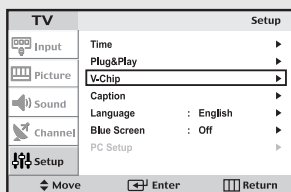


**3**

 The "Enter Pin" screen will appear. Enter your 4-digit Pin number. Note: The default Pin number for a new TV set is "0-0-0-0."

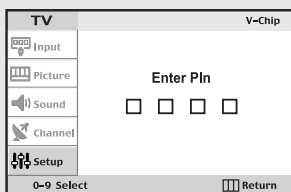


**4**

 After entering a valid PIN number, the "V-Chip" screen will appear. Press the **UP/DOWN ▲▼** buttons to select "Change Pin."

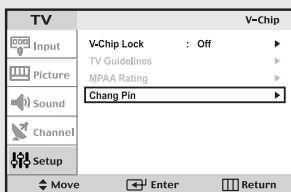

**5**

 Press the **ENTER** button. The Change pin screen will appear. Choose any 4-digits for your Pin and enter them.

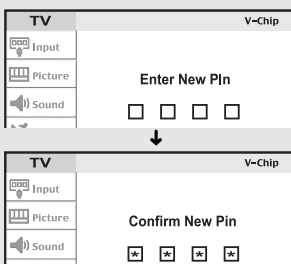

As soon as the 4 digits are entered, the "Confirm new Pin" screen appears. Re-enter the same 4 digits. When the Confirm screen disappears, your Pin has been memorized. Press the **MENU** button to exit.

◀Note: If you forget the Pin, press the remote-control buttons in the following sequence, which resets the pin to 0-0-0-0:  
POWER OFF → MUTE → 8 → 2 → 4 → POWER ON.



## OPERATION

 
### How to Enable/Disable the V-Chip

Note: V-Chip cannot be used during PIP operation.

**1**


Press the **MENU** button to display the menu.

Press the **UP/DOWN ▲▼** buttons to select "Setup", then press the **ENTER** button.

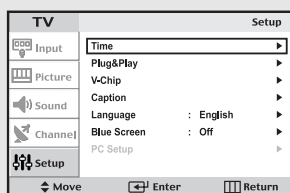


**2**

 Press the **UP/DOWN ▲▼** buttons to select "V-Chip", then press the **ENTER** button.

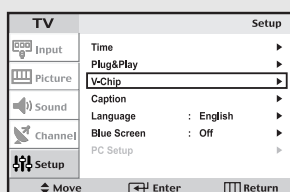

**3**

 
The "Enter Pin" screen will appear. Enter your 4-digit Pin number.

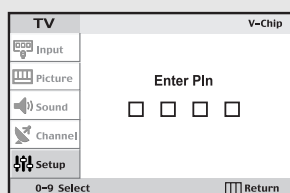

**4**

The "V-Chip" screen will appear, and "V-Chip Lock" will be select.

 To enable the V-Chip feature, press the **ENTER** button so that the "V-Chip Lock" is set to Yes. (Pressing the **UP/DOWN ▲▼** buttons will alternate between On and Off.)

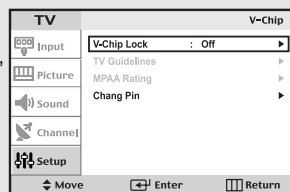


### How to Set up Restrictions Using the 'TV guidelines'

First, set up a personal identification number (PIN), and enable the V-Chip. (See previous section.) Parental restrictions can be set up using either of two methods: The TV guidelines or the MPAA rating.

**1**

Press the **MENU** button to display the menu.

 Press the **UP/DOWN ▲▼** buttons to select "Setup", then press the **ENTER** button.

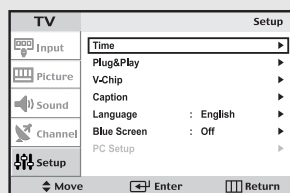


## OPERATION

### 2


Press the **UP/DOWN ▲▼** buttons to select "V-chip", then press the **ENTER** button.

 The "Enter pin" screen will appear. Enter your 4-digit PIN number.

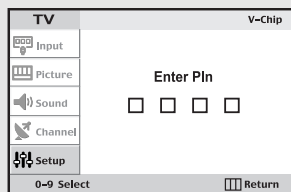

### 3

 Press the **UP/DOWN ▲▼** buttons to select "TV Guidelines", then press the **ENTER** button.

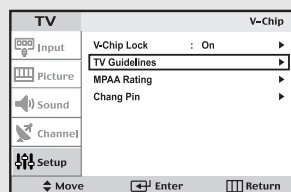


### 4

The "TV guidelines" screen will appear. Press the **UP/DOWN ▲▼** buttons to select one of the six age-based categories:

TV-Y Young children  
TV-Y7 Children 7 and over

 TV-G General audience  
TV-PG Parental guidance  
TV-14 Viewers 14 and over  
TV-MA Mature audience

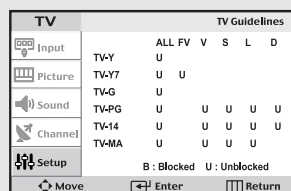

◀Note: These categories consist of two separate groups : TV-Y and TV-Y7 (young children through age 7), and TV-G through TV-MA (everybody else).

The restrictions for these two groups work independently:

If a household includes very young children as well as young adults, the TV guidelines must be set up separately for each age group. (See next step.)

### 5

At this point, one of the TV-Ratings is selected.

Press the **ENTER** button: Depending on your existing setup, the color of the letter "U" or "B" will be highlighted. (U= Unblocked, B= Blocked)

When the color of the "U" or "B" is highlighted, press the **ENTER** button to block or unblock the category.

A TV-Rating will be highlighted.

To exit this screen, press the **MENU** again. To select a different TV-Rating, press the **UP/DOWN ▲▼** buttons and then repeat the process.

Note 1: The TV-Y7, TV-PG, TV-14 and TV-MA have additional options.

See the next step to change any of the following sub-ratings:

FV: Fantasy Violence  
D: Sexual suggestive Dialog  
L: Adult Language  
S: Sexual situation  
V: Violence


Note 2: The V-Chip will automatically block certain categories that are "more restrictive." For example, if you block "TV-Y" category, then TV-Y7 will automatically be blocked. Similarly, if you block the TV-G category, then all the categories in the "young adult" group will be blocked (TV-PG, TV-14 and TV-MA). The sub-ratings (D, L, S, V) work together similarly. (See next section.)


## OPERATION

### 6



 How to set the FV, D, L, S and V sub-ratings.

 First, highlight one of these TV-Ratings: TV-Y7, TV-PG, TV-14 or TV-MA (See Step 4, on previous page).

Next, while the TV-Rating is selected, repeatedly press the **ENTER**() button. This will cycle through the available sub-ratings (FV,L, S, D or V).

A highlighted letter ("U" or "B") will be displayed for each sub-rating. While the "U" or "B" is highlighted, press the **ENTER**() buttons to change the sub-rating.

Press **MENU** once to save the TV guidelines. A TV-Rating will be selected, and no letters "U" or "B" will be changed to yellow.

To exit this screen, press the **MENU** button again. To select a different TV-Rating, press the **UP/DOWN**   buttons and then repeat the process.

Note: The V-chip will automatically block certain categories that are "More restrictive".

For example, if you block "L" sub-rating in TV-PG, then the "L" sub-ratings in TV-14 and TV-MA will automatically be blocked.

### 7

Press the **MENU** button three times to clear all the screens.



 
(Or proceed to the next section, and set up additional restrictions based on the MPAA codes).




## How to Set up Restrictions using the MPAA Ratings: G, PG, PG-13, R, NC-17, X


The MPAA rating system uses the Motion Picture Association of America (MPAA) system, and its main application is for movies. (Eventually, movie videocassettes will be encoded with MPAA ratings.) When the V-Chip lock is on, the TV will automatically block any programs that are coded with objectionable ratings (either MPAA or TV-Ratings).

### 1

Press the **MENU** button to display the menu.


Press the **UP/DOWN**   buttons to select "Setup", then press the **ENTER**() button.

 Press the **UP/DOWN**   buttons to select "V-Chip", then press the **ENTER**() button.

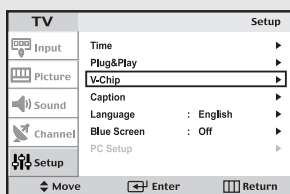

### 2

 
The "Enter pin" screen will appear. Enter your 4-digit Pin number.

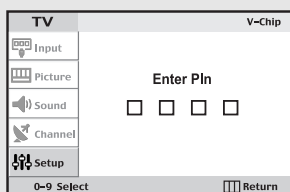

## OPERATION

### 3

 Press the **UP/DOWN ▲▼** buttons to select "MPAA Rating", then press the **ENTER** (↵) button.

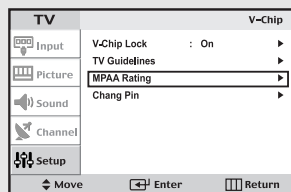

### 4

Repeatedly press the **UP/DOWN ▲▼** buttons to select a particular MPAA category. (When a category is selected, its color changes to yellow.) Pressing the **UP/DOWN ▲▼** buttons will cycle through the MPAA categories:

TV	MPAA Rating	
Input	G	U
Picture	PG	U
Sound	PG-13	U
Channel	R	U
Setup	NC-17	U
	X	U
	NR	U
	B : Blocked U : Unblocked	

**G** General audience (no restrictions).

**PG** Parental guidance suggested.

**PG-13** PG-13 (Parents strongly cautioned).

**R** R (Restricted. Children under 17 should be accompanied by an adult).

**NC-17** No children under age 17.

**X** X (Adults only).

**NR** Not rated.

Press the **UP/DOWN ▲▼** buttons to select a category.

Press the **ENTER** (↵) buttons to select "U" or "B".

Press the **MENU** button three times to save the settings and to clear all screens.

Note: The V-Chip will automatically block any category that is "more restrictive".

For example, if you block the "PG-13" category, then "R," "NC-17," and "X" will automatically be blocked also.

### How to Reset the TV after the V-Chip Blocks a Channel ('Emergency Escape')

If the TV is tuned to a restricted channel, the V-Chip will block it. The screen will go blank and the following message will appear: "Excessive rating".

To resume normal viewing, tune to a different channel using the number buttons. Under certain conditions (depending on the rating of the local TV programs) the V-Chip might lock out all the channels.

In this case, use the Menu button for an "emergency escape":

Select the V-Chip on the Menu. Enter your PIN number, and press the **ENTER** (↵) button to temporarily disable the V-Chip Lock.

 
# Chapter Five

## PC DISPLAY

### Using Your TV as a Computer (PC) Display

#### How to Set up Your PC Software (Windows only)

The Windows display-settings for a typical computer are shown below. However, the actual screens on your PC will probably look different, depending upon your particular version of Windows and your particular video card. Even if your actual screens look different, the same, basic set-up information will apply in most cases. (If not, contact your computer manufacturer or Samsung Dealer.)


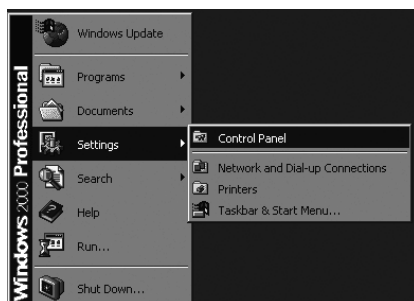


First, click on "Settings" on the Windows start menu.

While "Settings" is highlighted, move the cursor so that "Control Panel" is highlighted.

When the control panel screen appears, click on "Display" and a display dialog-box will appear.

  Navigate to the "settings" tab on the display dialog-box.

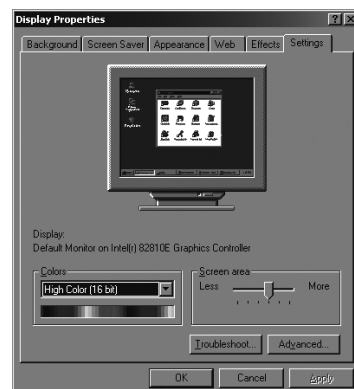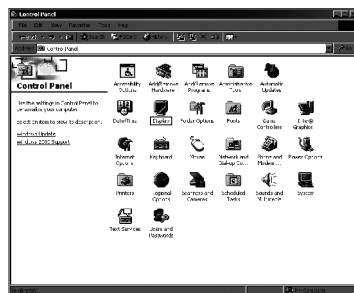

The two key variables that apply the TV-PC interface are "resolution" and "colors." The correct settings for these two variables are:

\* Size (sometimes called "resolution"): 1280 x 768 pixels

If a vertical-frequency option exists on your display settings dialog box, the correct value is "60" or "60 Hz". Otherwise, just click "OK" and exit the dialog box.

\* See "Display Modes" on page 59.

## PC DISPLAY

### Adjusting the Screen Quality

 
The purpose of the picture quality adjustment is to remove or reduce picture noise. If the noise is not removed by fine tuning alone, then do the frequency adjustments to the utmost and fine tune again. After the noise has been reduced, re-adjust the picture so that it is aligned on the center of screen.

Press the PC button on the remote control to select the PC mode.

**1**


Press the **MENU** button to display the menu.

Press the **UP/DOWN▲▼** buttons to select "Setup", then press the **ENTER** button.

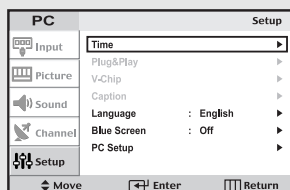


**2**

 Press the **UP/DOWN▲▼** buttons to select "PC Setup", then press the **ENTER** button.

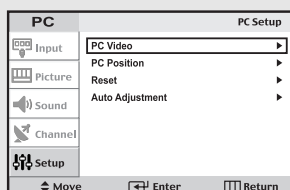



**3**

 Press the **ENTER** button to select "PC Video". Press the **UP/DOWN▲▼** buttons to select "Frequency" or "Phase".

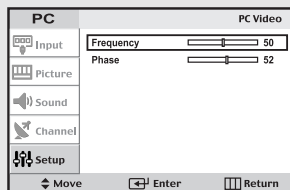

**4**

  Press the **LEFT/RIGHT◀▶** buttons to adjust the screen quality, vertical stripes appear or the picture may be blurry.

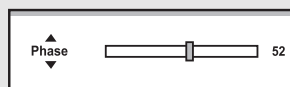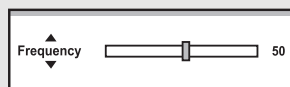

**5**

When you are satisfied with the settings, press the **MENU** button repeatedly to return to normal viewing.


## PC DISPLAY

 
### Changing the Screen Position

Press the PC button on the remote control to select the PC mode.


**1**

 
Press the **MENU** button to display the menu.

Press the **UP/DOWN ▲▼** buttons to select "Setup", then press the **ENTER**  button.

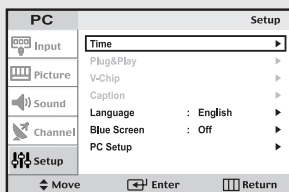


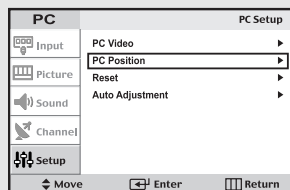 
**2**

Press the **UP/DOWN ▲▼** buttons to select "PC Setup", then press the **ENTER**  button.

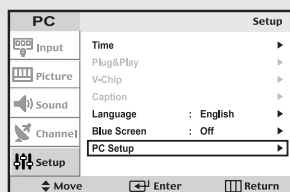

**3**

 
Press the **UP/DOWN ▲▼** buttons to select "PC Position", then press the **ENTER**  button.



**4**

Press the **UP/DOWN ▲▼** buttons to adjusting the V-Position.  
Press the **LEFT/RIGHT ◀▶** buttons to adjusting the H-Position.

Press the **MENU** button to exit.

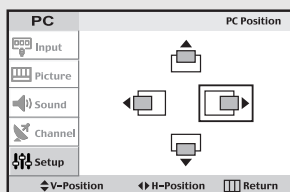


## PC DISPLAY


### How to Auto Adjust

Use the Auto Adjust function to have the TV set automatically adjust the video signals the monitor receives. The function also automatically fine-tunes the settings and adjusts the frequency values and positions.


# 1

 
Press the **MENU** button to display the menu.

 Press the **DOWN ▼** button to select "Setup", then press the **ENTER**  button.

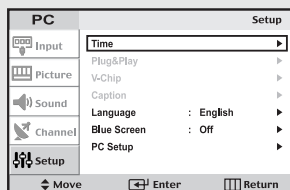



# 2

  Press the **UP/DOWN ▲▼** buttons to select "PC Setup", then press the **ENTER**  button.

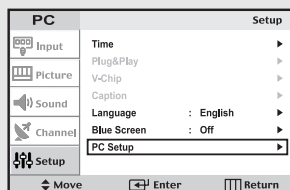

# 3

  Press the **UP/DOWN ▲▼** buttons to select "Auto Adjustment", then press the **ENTER**  button.

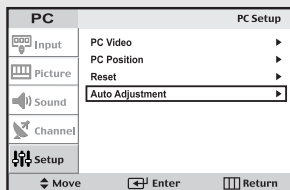

# 4

Press the **MENU** button to exit.

**Auto Adjustment**



# Chapter Six

## TROUBLESHOOTING

If the TV seems to have a problem, first try this list of possible problems and solutions. If none of these troubleshooting tips apply, call your nearest Samsung service center.

### Identifying Problems

 
Problem	Possible Solution
Poor picture	Try another channel. Adjust the antenna. Check all wire connections.
Poor sound quality.	Try another channel. Adjust the antenna.
No picture or sound.	Try another channel. Press the TV/VIDEO button. Make sure the TV is plugged in. Check the antenna connections.
No sound or sound is too low at maximum volume.	First, check the volume of units connected to your TV (digital broadcasting receiver, DTV, DVD, cable broadcasting receiver, VCR, etc.). Then, adjust the TV volume accordingly.
Picture rolls vertically.	Check all wire connections.
The TV operates erratically.	Unplug the TV for 30 seconds, then try operating it again.
The TV won't turn on.	Make sure the wall outlet is working.
Remote control malfunctions	Replace the remote control batteries. Clean the upper edge of the remote control (transmission window). Check the battery terminals.
"Check Signal Cable" message.	Ensure that the signal cable is firmly connected to the PC sources.

## TROUBLESHOOTING

<b>Problem</b>	<b>Possible Solution</b>
“Not Supported Mode!” message.	Check the maximum resolution and the frequency of the video Adapter. Compare these values with the data in the Display Modes Timing Chart.
The image is too light or too dark.	Adjust the Brightness and Contrast. Adjust the Fine function.
Horizontal bars appear to flicker, jitter or shimmer on the image.	Adjust the Coarse function and then adjust the Fine function.
Vertical bars appear to flicker, jitter or shimmer on the image.	Adjust the Coarse function and then adjust the Fine function.
Screen is black and power indicator light blinks steadily.	On your computer check: Power , Signal Cable(15-pin D-Sub) The TV is using its power management system. Move the computer's mouse or press a key on the keyboard.
Image is not stable and may appear to vibrate.	If the setting is not correct, use your computer utility program to change the display settings. NOTE: Your TV supports multiscan display functions within the following frequency domain: <ul style="list-style-type: none"> <li>• Horizontal frequency: 30 kHz ~ 68 kHz</li> <li>• Vertical frequency: 56 Hz ~ 85 Hz</li> <li>• Maximum refresh rate: 1280 x 768 @ 60 Hz</li> </ul>
Image is not centered on the screen.	Adjust the horizontal and vertical position.
If a still image is displayed for an extended period of time, residual images or blurring may appear.	When you need to leave the monitor unused for an extended period of time, adjust the settings so that the monitor automatically goes into energy saving mode or activates the screen saver to display moving images.

## APPENDIX

### How to assemble the TV set and stand base

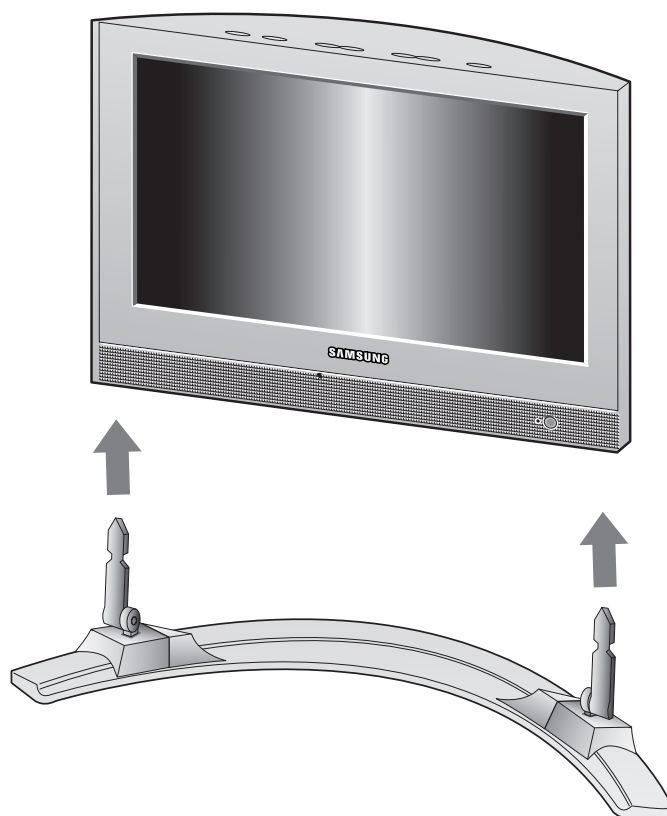

**NOTE :** The curved side of the stand base should be placed at the back of the TV set as shown in the above figure.

## APPENDIX

 
 
### Installing the Wall Mount Kit (sold separately)

This installation is to be used when attaching the wall mount to a concrete wall.

When attaching to other building materials, please contact your nearest dealer.

**1** Connect the hinge to the wall mount bracket.




**2** Secure the bracket to the wall.

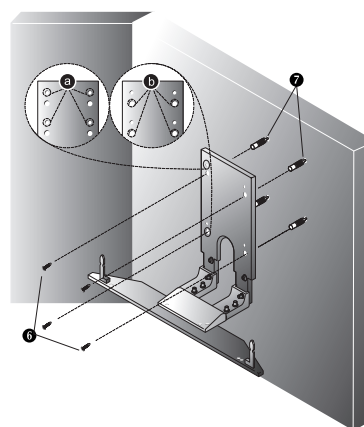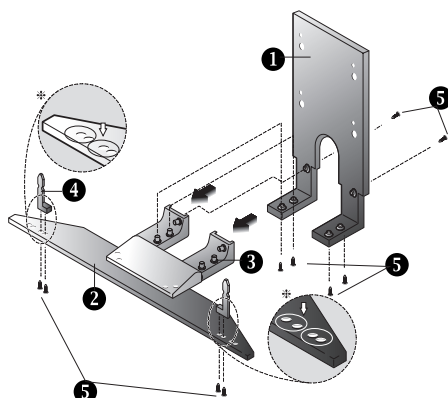


Use (a) holes to attach the VESA mount.  
Use (b) holes to attach the wall mount.

**3** Remove the base from the TV set.

   
**4** Mount the TV on the wall mount bracket.

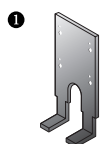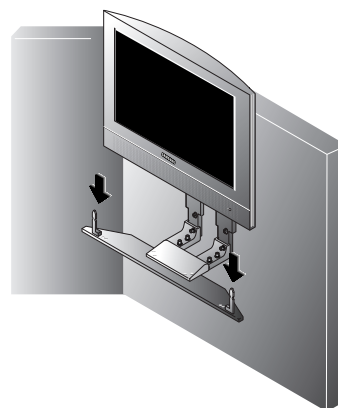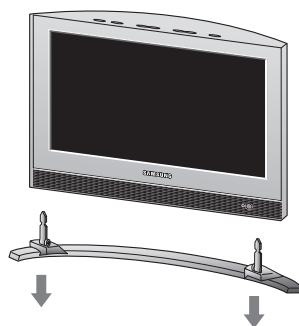


Holder-Wall : 1EA

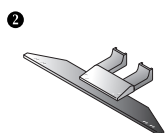 


Holder-Ass'y : 1EA

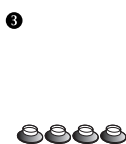 

Rubber : 4EA

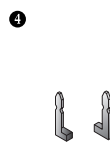 


Holder-LCD L/R : 2EA

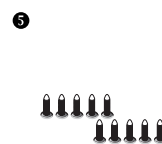 

Screw FH 4 x 8 : 10EA



 Screw BH 4 x 25 : 4EA

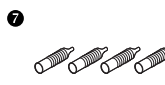


Anchor : 4EA

#The wall mount bracket is sold separately.
 
## APPENDIX

### Using the Anti-Theft Kensington Lock

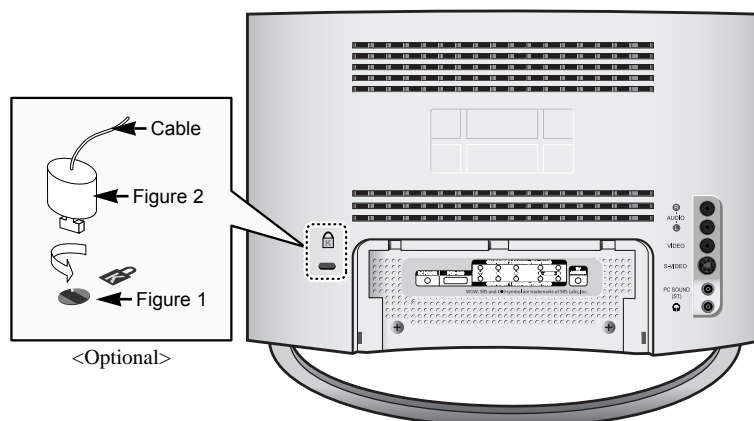

The Kensington lock is a device used to physically fix the system when using it in a public place. The locking device has to be purchased separately. The appearance and locking method may differ from the illustration depending on the manufacturer. Please refer to the manual provided with the Kensington lock for proper use.

#### 1

Insert the locking device into the Kensington slot on the LCD TV (Figure 1), and turn it in the locking direction (Figure 2).

#### 2

Connect the Kensington lock cable.

 
#### 3

Fix the Kensington lock to a desk or a heavy stationary object.

### Retractable Stand

Note: The maximum tilt angle is 10 degrees in the backward direction.

Please do not tilt the TV outside the specified range. Using excessive force to tilt the TV may cause permanent damage to the mechanical part of the stand.

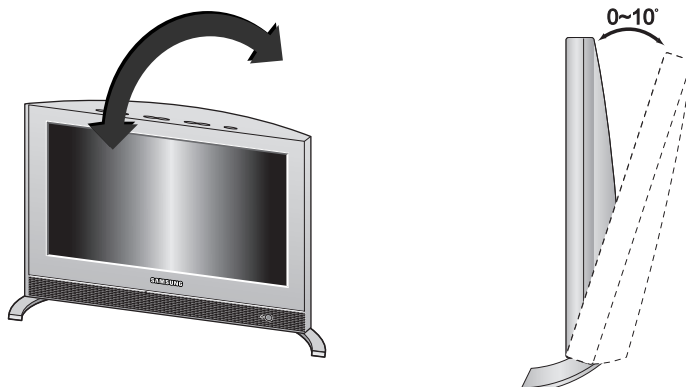

## APPENDIX

### Cleaning and Maintaining Your TV

With proper care, your TV unit will give you many years of service. Please follow these guidelines to get the maximum performance from your TV.

#### Placement

- Do not place the TV near extremely hot, cold, humid or dusty places.
- Do not place the TV near appliances with electric motors that create magnetic fields, such as vacuum cleaners.
- Keep the ventilation openings clear; do not place the TV on a soft surface, such as cloth or paper.
- Place the TV in a vertical position only.

#### Liquids

- Do not handle liquids near or on the TV.  
Liquids that spill into it can cause serious damage.

#### Cabinet

- Never open the cabinet or touch the parts inside.
- Wipe your TV with a clean, dry cloth. Never use water, cleaning fluids, wax, or chemicals.
- Do not put heavy objects on top of the cabinet.

#### Temperature

- If your TV is suddenly moved from a cold to a warm place, unplug the power cord, and allow at least two hours for moisture that may have formed inside the unit to dry completely.

### Using Your TV in Another Country

If you plan to take your TV with you to a foreign country, please be aware of the different television systems that are in use around the world. A TV designed for one system may not work properly with another system due to differences in the TV channel frequencies.

## APPENDIX

### Specifications

Model Name		LTN1785W
Panel	Size Display Size Type Pixel Pitch Viewing Angle	17.0 inch Diagonal 370.56(H) X 222.36(V)mm a-si TFT active matrix 0.2895(H) X 0.2895(V)mm 170/170 (H/V)
*Frequency	Horizontal Vertical Display Color	30 ~ 68 kHz 56 ~ 85 Hz 16,777,216 colors
Display Resolution	Maximum Mode	1280 X 768 @ 60 Hz
Input Signal	Sync. Video signal	H/V Separate, TTL, P. or N. 0.7 Vp-p @ 75 ohm
Video	Color system Video system	NTSC CVBS, S-VHS, RGB
Component	Video In Audio In	1.0 Vp-p @ 75 ohm 500mVrms
Power Supply	Input Output	AC 100 ~ 240 V (50/60Hz), DC 14V / 4.5A
Power Consumption	Maximum Power Saving	70 W < 3 W
Dimensions / Weight	Unit (WxDxH): body  With stand	18.26 x 3.45 x 13.60 inch / 9.7 lbs (463.8 x 87.7 x 345.0 mm / 4.4 kg) 18.26 x 7.05 x 14.32 inch / 10.4 lbs (463.8 x 179.0 x 363.7 mm / 4.72 kg)
Environmental Considerations	Operating Temperature Operating Humidity Storage Temperature Storage Humidity	50 °F to 104 °F (10 °C to 40 °C) 10% to 80% -13 °F to 113 °F (-25 °C to 45 °C) 5% to 95%
Audio Characteristics	Audio Input 1 Audio Input 2 Headphone out Frequency Response	RCA Jack Red(R) White(L), 0.5Vrms (-9dB) 3.5ø Stereo Jack, 0.5Vrms (-9dB) Max. 10mW Output (3.5ø Stereo Jack 32) RF: 80Hz ~ 15KHz (at - 3dB) A/V: 80Hz ~ 20KHz (at - 3dB)

\* Referring to Display Modes, page 59.

## APPENDIX

### Display Modes

If the signal from the system equals the standard signal mode, the screen is adjusted automatically. If the signal from the system doesn't equal the standard signal mode, adjust the mode by referring to your Videocard user guide; otherwise there may be no video. For the display modes listed below, the screen image has been optimized during manufacture.

Mode	Resolution	Horizontal Frequency (kHz)	Vertical Frequency (Hz)	Pixel Clock Frequency (MHz)	Sync Polarity (H/V)
Macintosh	640 X 480	35.000	66.667	30.240	- / -
	832 X 624	49.726	74.551	49.500	+ / +
IBM	640 X 480	31.496	59.940	25.175	- / -
	720 X 400	31.469	70.087	28.322	- / -
VESA	640 X 480	37.861	72.809	31.500	- / -
	640 X 480	37.500	75.000	31.500	- / -
	640 X 480	43.269	85.008	36.000	- / -
	800 X 600	35.156	56.250	36.000	+ / -
	800 X 600	37.879	60.317	40.000	+ / +
	800 X 600	48.077	72.188	50.000	+ / +
	800 X 600	46.875	75.000	49.500	+ / +
	800 X 600	53.674	85.061	56.250	- / -
	1024 X 768	48.363	60.004	65.000	- / -
	1024 X 768	56.476	70.069	75.000	- / -
	1024 X 768	60.023	75.029	78.750	+ / +
	1024 X 768	68.677	84.997	94.500	+ / +
GTF	1280 X 768	47.700	60.000	80.136	- / +